

**Pioneer**

# BDP-120

Blu-ray Disc PLAYER

Discover the benefits of registering your product online at  
<http://www.pioneer.co.uk> (or <http://www.pioneer.eu>).

Operating Instructions



**HDMI**



# OPERATING INSTRUCTIONS

Thank you for buying this Pioneer product.

Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

## IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**CAUTION:**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

D3-4-2-1-1\_A1\_En

## CAUTION

This product is a class 1 laser product, but this product contains a laser diode higher than Class 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.



The following caution label appears on your unit.  
Location: inside of the unit



D3-4-2-1-8\*\_C\_En

## WARNING

To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment.

D3-4-2-1-7a\_A\_En

## VENTILATION CAUTION

When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 10 cm at top, 10 cm at rear, and 10 cm at each side).

## WARNING

Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product, and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered with items (such as newspapers, table-cloths, curtains) or by operating the equipment on thick carpet or a bed.

D3-4-2-1-7b\_A\_En

## WARNING

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

D3-4-2-1-3\_B\_En

## WARNING

Before plugging in for the first time, read the following section carefully.

The voltage of the available power supply differs according to country or region. Be sure that the power supply voltage of the area where this unit will be used meets the required voltage (e.g., 230 V or 120 V) written on the rear panel.


D3-4-2-1-4\_A\_En

# DEAR Pioneer CUSTOMER

If the AC plug of this unit does not match the AC outlet you want to use, the plug must be removed and appropriate one fitted. Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel. If connected to an AC outlet, the cut-off plug can cause severe electrical shock. Make sure it is properly disposed of after removal. The equipment should be disconnected by removing the mains plug from the wall socket when left unused for a long period of time (for example, when on vacation).

D3-4-2-1a\_A\_En

## CAUTION

The  STANDBY/ON switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation).

D3-4-2-2a\_A\_En

## POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

S002\*\_En

## Operating Environment

Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 80 %RH (cooling vents not blocked)

Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light)

D3-4-2-1-7c\*\_A1\_En

This product is for general household purposes. Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period.

K041\_En



This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

For U.K. model:

Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.

**IMPORTANT: THE MOULDED PLUG**

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 5 amp fuse is fitted in this plug. Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 5 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover, you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be obtained from your local dealer.

**If the fitted moulded plug is unsuitable for your socket outlet, then the fuse shall be removed and the plug cut off and disposed of safely. There is a danger of severe electrical shock if the cut off plug is inserted into any 13 amp socket.**


If a new plug is to be fitted, please observe the wiring code as shown below. If in any doubt, please consult a qualified electrician.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Blue : Neutral    Brown : Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows :

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter **N** or coloured BLACK.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter **L** or coloured RED.

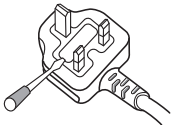

**How to replace the fuse:** Open the fuse compartment with a screwdriver and replace the fuse.

D3-4-2-1-2-2\_B\_En

**Information for users on collection and disposal of old equipment and used batteries**

(Symbol for equipment)



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.

(Symbol examples for batteries)



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

**These symbols are only valid in the European Union.**

**For countries outside the European Union:**

If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

K058a\_A1\_En

# Contents

## Introduction

<b>What would you like to do with this Player?</b> .....	<b>5</b>
<b>About Discs</b> .....	<b>6-7</b>
Blu-ray Disc .....	6
Types of Discs that Can Be Used with This Player .....	6
Discs that Cannot Be Used with This Player .....	6-7
<b>About Disc Contents</b> .....	<b>8</b>
BD Video .....	8
Title, Chapter and Track .....	8
Icons Used on DVD Video Disc Cases .....	8
The Icons Used in This Operating Instructions .....	8
<b>Important Information</b> .....	<b>9</b>
Disc Precautions .....	9
Copyright .....	9
<b>Getting Started</b> .....	<b>10</b>
<b>Major Components</b> .....	<b>11-12</b>
Main Unit (Front) .....	11
Main Unit (Rear) .....	11
HDMI cable holder on the rear of the main unit .....	11
Remote Control Unit .....	12

## Connection

<b>Introduction to Connections</b> .....	<b>13</b>
<b>Video Connections</b> .....	<b>14-16</b>
Connecting to the HDMI Terminal .....	14
Selecting the priority video output when connecting HDMI and Component video .....	14
Connecting to the Component Jacks .....	15
Connecting to the Video Jack .....	16
<b>Audio Connections</b> .....	<b>17</b>
Connecting to the Digital Audio Terminal or Audio Jacks .....	17
<b>Broadband Internet Connection</b> .....	<b>18</b>
Connecting to the LAN terminal .....	18

## Disc Playback

<b>Before Starting Playback</b> .....	<b>19-23</b>
Loading the Batteries in the Remote Control .....	19
Approximate operating range of remote control .....	19
Connecting the Power Cord .....	19
Turning the Power On .....	20
Turning the power on .....	20
Entering standby .....	20
Indicators on the Player .....	20
Language Setting .....	21
Changing the on-screen display language .....	21
Operating the TV with the player's remote control .....	21
TV Preset code list .....	21-22
Turning Off the LCD Backlight and Indications .....	23
Operate using the remote control unit .....	23
HOME MENU operation .....	23
About KURO LINK function .....	23
To use the KURO LINK function .....	23
What the KURO LINK function can do .....	23
<b>BD/DVD/CD Playback</b> .....	<b>24-29</b>
Loading a Disc .....	24
BD/DVD Video Playback .....	24
Displaying the disc information .....	24
BD/DVD Menus .....	25
Start playback by selecting a title from the top menu .....	25
Using the disc menu .....	25
Using the pop-up menu .....	25
Enjoying BONUSVIEW or BD-LIVE .....	26
Secondary video playback .....	26
Virtual Package .....	26
BD-LIVE .....	26

DVD-RW/-R/BD-RE/-R Playback .....	27-28
Playback by selecting a title .....	27
Playback by selecting a chapter .....	28
Sorting the titles .....	28
Playback by selecting a Playlist .....	28
Playing back the title you stopped while being played .....	28
Audio CD Playback .....	29
Playback from the beginning .....	29
Playback by selecting a track .....	29
Operation procedure for the "Functions" menu .....	29
<b>Playback Functions</b> .....	<b>30-32</b>
Fast Forward/Reverse (Search) .....	30
Skipping to the Next or the Start of the Current Chapter (Track) .....	30
Pause/Frame Advance Playback .....	30
Slow Playback .....	30
Skip Search .....	30
Replay .....	30
Repeat Playback of a Title or Chapter (Repeat Playback) .....	30
Partial Repeat Playback (Repeat Playback of a Specified Part) .....	31
Displaying the Audio Information .....	31
Displaying the Angle Mark .....	32
Switching Subtitles .....	32
Switching the Angle .....	32
<b>JPEG File Playback</b> .....	<b>33</b>
Playing back still images in sequence .....	33
Playing back still images in a selected folder .....	33
Playing back Slide Show .....	33
Setting slide show speed/repeat playback .....	33
<b>Settings During Playback</b> .....	<b>34-35</b>
Function Control .....	34
Function control operation procedure .....	34
Functions which can be set .....	35

## Settings

<b>SETTINGS</b> .....	<b>36-45</b>
Common operations .....	36
Basic Operation for Playback Setting .....	36
Audio Video Settings .....	37-38
Quick Start .....	38
Auto Power Off .....	38
KURO LINK .....	38
Playback Setting .....	39
Front Display/LED .....	39
Version .....	39
System Reset .....	39
Communication Setup .....	40-42
The operation procedure for inputting characters manually .....	42
USB Memory Management .....	43
Software Update .....	44

## Appendix

<b>Troubleshooting</b> .....	<b>46-48</b>
To Reset this Player .....	48
<b>On-screen Error Messages</b> .....	<b>49</b>
<b>Glossary</b> .....	<b>50-51</b>
<b>Specifications</b> .....	<b>52</b>
<b>Licenses</b> .....	<b>53</b>

\* The illustrations and on-screen displays in this operating instructions are for explanation purposes and may vary slightly from the actual operations.

# What would you like to do with this Player?

## Watching high quality movies on Blu-ray discs

This Player offers full high-definition Blu-ray disc playback.

**BD/DVD/CD Playback (p. 24)**

## Enjoying different kinds of discs and contents

Use this Player to enjoy various types of optical discs such as DVDs and CDs that contain various multimedia content.

**About Discs (pp. 6–7)**  
**BD/DVD/CD Playback (p. 24)**

## Simple connection and operation through HDMI

This Player is equipped with an HDMI terminal. You can connect it to the TV using HDMI and no other cable will be needed to enjoy movies. If your TV is compatible with KURO LINK, you can control both the TV and this Player with simple operations.

**Introduction to Connections (p. 13)**  
**Video Connections (p. 14)**

## Enjoying BD-LIVE functions through the internet

This Player is compatible with BD-LIVE. You can enjoy bonus content such as movie trailers through the internet when playing back BD-Video discs compatible with BD-LIVE.

**Enjoying BONUSVIEW or BD-LIVE (p. 26)**

## What to do first:

Refer to "Getting Started" (p. 10) to prepare for watching your discs.

## Introduction (pp. 5–12)

Explains the important operation information.

## Connection (pp. 13–18)

Shows the connecting options provided by this Player.

## Disc Playback (pp. 19–35)

Shows simple playback and useful functions.

## Settings (pp. 36–45)

Gives you more options to suit your circumstances.

## Appendix (pp. 46–56)

Provides troubleshooting tips and more information.

# About Discs



## Blu-ray Disc

Blu-ray Disc is the ultimate next generation optical media format, offering the following key features:

- Largest capacity (25 GB single layer – 50 GB dual layer)
  - with over 5 times the amount of content possible with current DVDs, particularly well suited for high definition feature films with extended levels of interactive features
- Pristine picture quality with the capability for full high definition 1920 x 1080p resolution
- Best audio possible with uncompressed surround sound
  - Hardware products will be backward compatible with DVDs, allowing continued enjoyment of existing DVD libraries.
- Disc Durability – new breakthroughs in hard coating technologies gives Blu-ray Discs the strongest resistance to scratches and finger prints.

## Types of Discs that Can Be Used with This Player

- The following discs can be played back in this Player. Do not use an 8 cm (3") to 12 cm (5") adapter.
- Use discs that conform to compatible standards as indicated by the presence of official logos on the disc label. Playback of discs not complying with these standards is not guaranteed. In addition, the image quality or sound quality is not guaranteed even if the discs can be played back.

Disc Type		Recording Format	Contents	Disc Size
BD video	Region code B/ALL 	—	Audio + Video (Movie)	12 cm (5")
BD-RE DL BD-R DL		BDMV/BD-AV format		
DVD Video	Region code 2/ALL 	Video format	Audio + Video (Movie)	12 cm (5") 8 cm (3")
DVD+RW/DVD+R DVD-R DL DVD+R DL DVD-RW/DVD-R		Video/VR/AVCHD format (finalized disc only)	Audio + Video (Movie)	12 cm (5") 8 cm (3")
Audio CD* <sup>1</sup>		Audio CD (CD-DA)	Audio	12 cm (5") 8 cm (3")
CD-RW/CD-R		Audio CD (CD-DA)	Audio	
		JPEG* <sup>2</sup>	Still image (JPEG file)	

\*<sup>1</sup> This Player has been designed on the premise of playing back Audio CDs that comply with CD (Compact Disc) standards. CDs containing a signal for the purpose of protecting copyrights (copy control signal) may not be able to be played back with this Player.

- BD/DVD video players and discs have region codes, which dictate the regions in which a disc can be played. This Player's region code is **B** for BD and **2** for DVD. (Discs marked **ALL** will play in any player.)

- BD/DVD Video operations and functions may be different from the explanations in this manual and some operations may be prohibited due to disc manufacturer's settings.
- If a menu screen or operating instructions are displayed during playback of a disc, follow the operating procedure displayed.
- The audio component of a DVD video recorded at 96 kHz (Linear PCM) will be output as 48 kHz audio during playback.

### NOTE

- Playback for some of the discs in the left side column tables may not be possible depending on the disc.
- "Finalize" refers to a recorder processing a recorded disc so that it will play in other DVD players/recorders as well as this player. Only finalized DVD discs will play back in this player. (This player does not have a function to finalize discs.)

## Discs that Cannot Be Used with This Player

**The following discs cannot be played back or will not play back properly on this Player. If such a disc is mistakenly played back, speaker damage may occur. Never attempt to play back these discs.**

CDG, Video CD, Photo CD, CD-ROM, CD-TEXT, SVCD, SACD, PD, CDV, CVD, DVD-RAM, DVD-Audio, BD-RE with the cartridge, CD-MP3, CD-WMA

### Discs with unusual shapes cannot be played.

- Discs with unusual shapes (heart-shaped or hexagonal discs, etc.) cannot be used. The use of such discs will cause malfunction.

### The following BD video discs cannot be played.

- Discs not displaying "B" or "ALL" for the region code (discs sold outside the authorized marketing area).\*
- Discs produced illegally.
- Discs recorded for commercial use.

\* The region code for this product is B.

### The following DVD video discs cannot be played.

- Discs not displaying "2" or "ALL" for the region code (discs sold outside the authorized marketing area).\*
- Discs produced illegally.
- Discs recorded for commercial use.

\* The region code for this product is 2.

### The following BD-RE/-R, DVD-RW/-R and DVD+RW/+R discs cannot be played.

- Discs on which data has not been recorded cannot be played back.
- Pioneer cannot guarantee playback compatibility for all self-recorded BD-discs because Blu-ray is a new and evolving format. The playback compatibility will be affected by your choice of BD-recorder, BD-disc and BD-burning software. Please always ensure you are using the latest software versions on all units and contact the individual manufacturers for further help if required. To avoid inconveniences, please check the playback compatibility of your self-recorded disc before you purchase this BD-player. For maximum playback compatibility of self-recorded BD-discs Pioneer recommends that the BDMV/BD-AV standards are used. If a playback issue occurs after purchase, please download the latest software version for your BD-player from the Pioneer internet page or ask your Pioneer-Dealer. This BD-player uses the latest technology



## About Discs

available at the time of development and cannot guarantee support for future enhancements or changes to the standard.

### The following Audio CD discs cannot be played.

- Discs containing a signal for the purpose of protecting copyrights (copy control signal) may not be played back with this Player.
- This Player has been designed on the premise of playing back Audio CDs that comply with CD (Compact Disc) standards. The following CD-RW/-R discs cannot be played.

### The following CD-RW/-R discs cannot be played.

- Discs on which data has not been recorded cannot be played back.
- Disc that has not been finalized.
- Discs recorded in a format other than an Audio CD and JPEG file format\*2 cannot be played back.
- Discs may not be played back depending on their recording status or the status of the disc itself.
- Discs may not be played back depending on their compatibility with this Player.

## \*2 About the JPEG file format

JPEG is a type of file format for storing still-image files (photos, illustrations, etc.). The Player lets you play JPEG format still-image files.

### File formats that are not compatible.

- Still images in formats other than JPEG (such as TIFF) cannot be played.
- There may be some files that cannot be played even if they are in JPEG format.
- Progressive JPEG files cannot be played.
- Moving image files and audio files as well as Motion JPEG format files cannot be played, even though they are JPEG files.

### Other files that cannot be played back.

- You may not be able to play some still images which you have created, touched up, copied or otherwise edited on your computer.

### You may experience one or more of the following symptoms when playing files.

- It may take some time to play files depending on the number of folders, number of files and volume of data involved.
- EXIF information will not be displayed. EXIF stands for Exchangeable Image File Format, and is a standard for storing interchange information in image files, especially those using JPEG compression. (Refer to <http://exif.org> for more information.)

### When using the unit to play a CD-RW/-R disc with still images stored (recorded).

- Discs that are not formatted in music CD format, or discs containing mixed media (for example, music, videos, and still photos in jpeg format) may not be playable. You may not be able to play some of these discs at all.
- Multi-session discs cannot be played.
- You may not be able to play some still images you have processed (rotated or saved by overwriting other images) using image processing software or some still images you have imported from the Internet or e-mail.

- The discs which this Player can play back (recognize) are limited to the following properties:

Contains EXIF format files

Picture resolution: Between  $32 \times 32$  and  $7680 \times 4320$  pixels


Maximum number of folders: 256

Maximum number of files in each folder: 256

File size: 20 MB or less

### Structure of still images (JPEG) folders

You can play still images (JPEG) with this unit by making folder on disc as shown below.

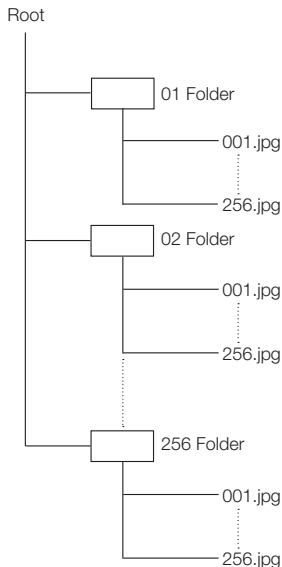

# About Disc Contents

## BD Video

Enjoy BD-specific functions including BONUSVIEW (BD-ROM Profile 1 Version 1.1), such as picture-in-picture, and BD-LIVE (page 26).

For the BD video discs compatible with BONUSVIEW/BD-LIVE, you can enjoy additional contents by copying the data from the discs or downloading it via the internet. For instance, this function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.


### NOTE

- The available functions differ depending on the disc.

## Title, Chapter and Track

- Blu-ray discs and DVDs are divided into "Titles" and "Chapters". If the disc has more than one movie on it, each movie would be a separate "Title". "Chapters", on the other hand, are subdivisions of titles. (See Example 1.)
- Audio CDs are divided into "Tracks". You can think of a "Track" as one tune on an Audio CD. (See Example 2.)

Example 1: Blu-ray disc or DVD

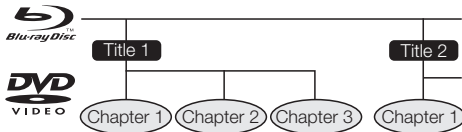


Example 2: Audio CD



## Icons Used on DVD Video Disc Cases

The back of the case of a DVD that is commercially available usually contains various information about the contents of the disc.

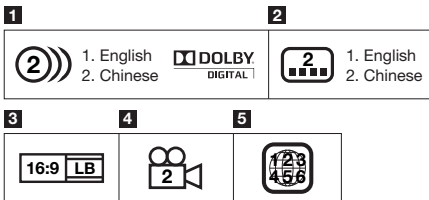

### 1 Audio tracks and audio formats

DVD discs can contain up to 8 separate tracks with a different language on each. The first in the list is the original track.

This section also details the audio format of each soundtrack — Dolby Digital, DTS, MPEG etc.

### Dolby Digital

A sound system developed by Dolby Laboratories Inc. that gives movie theater ambience to audio output when the Player is connected to a Dolby Digital processor or amplifier.

### DTS

DTS is a digital sound system developed by DTS, Inc. for use in cinemas.

### Linear PCM

Linear PCM is a signal recording format used for Audio CDs and on some DVD and Blu-ray discs. The sound on Audio CDs is recorded at 44.1 kHz with 16 bits. (Sound is recorded between 48 kHz with 16 bits and 96 kHz with 24 bits on DVD video discs and between 48 kHz with 16 bits and 192 kHz with 24 bits on BD video discs.)

### 2 Subtitle languages

This indicates the kind of subtitles.

### 3 Screen aspect ratio

Movies are shot in a variety of screen modes.

### 4 Camera angle

Recorded onto some DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left side, from the right side, etc.).

### 5 Region code

This indicates the region code (playable region code).

## The Icons Used in This Operating Instructions

<b>BD VIDEO</b>	.....	Indicates the functions that can be performed for BD Video discs.
<b>BD-RE</b>	.....	Indicates the functions that can be performed for BD-RE discs.
<b>BD-R</b>	.....	Indicates the functions that can be performed for BD-R discs.
<b>DVD VIDEO</b>	.....	Indicates the functions that can be performed for DVD Video discs.
<b>DVD-RW</b>	.....	Indicates the functions that can be performed for DVD-RW discs.
<b>DVD-R</b>	.....	Indicates the functions that can be performed for DVD-R discs.
<b>AUDIO CD</b>	.....	Indicates the functions that can be performed for Audio CDs.
<b>CD-R</b> JPEG	.....	Indicates the functions that can be performed for CD-R discs in JPEG format.
<b>CD-RW</b> JPEG	.....	Indicates the functions that can be performed for CD-RW discs in JPEG format.
<b>AVCHD</b>	.....	Indicates the functions that can be performed for DVD discs in AVCHD format.





# Important Information

## Disc Precautions

### Be Careful of Scratches and Dust

- BD, DVD and CD discs are sensitive to dust, fingerprints and especially scratches. A scratched disc may not be able to be played back. Handle discs with care and store them in a safe place.

### Proper Disc Storage

Place the disc in the center of the disc case and store the case and disc upright.	
Avoid storing discs in locations subject to direct sunlight, close to heating appliances or in locations of high humidity.	
Do not drop discs or subject them to strong vibrations or impacts.	
Avoid storing discs in locations where there are large amounts of dust or moisture.	

### Handling Precautions

- If the surface is soiled, wipe gently with a soft, damp (water only) cloth. When wiping discs, always move the cloth from the center hole toward the outer edge.



- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not touch the surface.
- Do not stick paper or adhesive labels to the disc.
- If the playing surface of a disc is soiled or scratched, the Player may decide that the disc is incompatible and eject the disc tray, or it may fail to play the disc correctly. Wipe any dirt off the playing surface with a soft cloth.

### Cleaning the Pick Up Lens

- Never use commercially available cleaning discs. The use of these discs can damage the lens.
- Request the nearest service center approved by Pioneer to clean the lens.

### Warnings about dew formation

- Condensation may form on pick up lens or disc in the following conditions:
  - Immediately after a heater has been turned on.
  - In a steamy or very humid room.
  - When the Player is suddenly moved from a cold environment to a warm one.

#### When condensation forms:

- It becomes difficult for the Player to read the signals on the disc and prevents the Player from operating properly.

#### To remove condensation:



- Take out the disc and leave the Player with the power off until the condensation disappears. Using the Player when there is condensation may cause malfunction.

## Copyright

- Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Refer to relevant laws in your country.

- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

**U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132; and 5,583,936**

- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio | Essential are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.
- "Blu-ray Disc" and  are trademarks.
- "BD-LIVE" logo is trademark of Blu-ray Disc Association.
-  is a trademark of DVD Format/Logo Licensing Corporation.

**HDMI**<sup>TM</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

- HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.
- "x.v.Color", **x.v.Colour** and **x.v.Color** are trademarks of Sony Corporation.



- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

**BONUSVIEW**<sup>TM</sup>

- "BONUSVIEW" is trademark of Blu-ray Disc Association.

**RW**  
COMPATIBLE

- This label indicates playback compatibility with DVD-RW discs recorded in VR format (Video Recording format). However, for discs recorded with a record-only-once encrypted program, playback can only be achieved using a CPRM compatible device.


 

**AVCHD**<sup>TM</sup>

- "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.

# Getting Started

## Step 1: Unpacking

Make sure the following accessories are provided with the product.
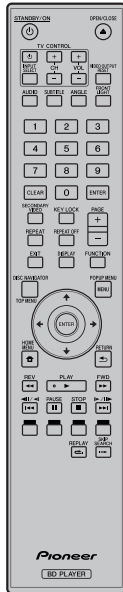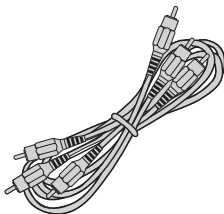
<p>Remote control unit</p> 	<p>"AA/R6" size battery (× 2)</p>  <p>AV cable</p>  <ul style="list-style-type: none"> <li>• AC cord</li> <li>• USB memory device*</li> <li>• Warranty card</li> <li>• Operating instructions (this document)</li> </ul>
--	--

\*Enclosed USB memory devices have not been confirmed for proper operation with this unit.

## Step 2: Selecting equipment to connect

Connection varies with the equipment used. Refer to Connection. (Pages 13–18)  
Turn off the devices before connecting.

## Step 3: Playing back discs


Play back a Blu-ray disc after connecting the Player to your favorite equipment.  
Refer to Disc Playback. (Pages 19–35)

## Step 4: Adjust settings

Adjust settings to enjoy various features and other functions for playing discs.  
Refer to Settings. (Pages 36–45)


# Major Components

## Main Unit (Front)

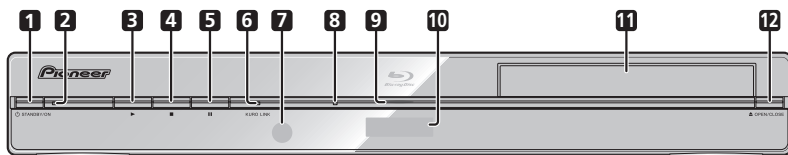

- |                                    |                                    |
|------------------------------------|------------------------------------|
| 1  STANDBY/ON (p. 20)              | 7 Remote control sensor (p. 19)    |
| 2 STANDBY/ON indicator (p. 20)     | 8 BD/DVD/CD disc indicator (p. 20) |
| 3  PLAY (p. 24)                    | 9 Playback indicator (p. 20)       |
| 4  STOP (p. 24)                    | 10 Front panel display (p. 20)     |
| 5  PAUSE (p. 30)                   | 11 Disc tray (p. 24)               |
| 6 KURO LINK indicator (pp. 20, 23) | 12  OPEN/CLOSE (p. 24)             |

## Main Unit (Rear)

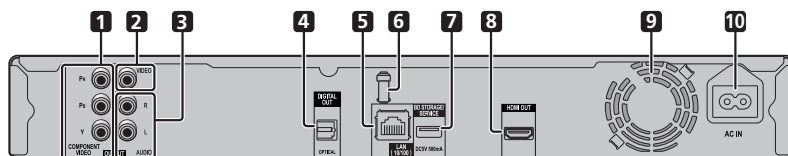

- |  |  |
|--|--|
| 1 COMPONENT VIDEO OUTPUT jacks (p. 15) | 7 BD STORAGE/SERVICE terminal BD STORAGE (pp. 26, 43) SERVICE for software (p. 44) |
| 2 VIDEO OUTPUT jack (p. 16)            | 8 HDMI OUT terminal (p. 14)  |
| 3 AUDIO OUTPUT jacks (p. 17)           | 9 Cooling fan<br>The cooling fan operates while the power to the Player is on.     |
| 4 DIGITAL OUT OPTICAL terminal (p. 17) | 10 AC IN terminal (p. 19)  |
| 5 LAN terminal (p. 18)                 |  |
| 6 HDMI cable holder (See below.)       |  |


### HDMI cable holder on the rear of the main unit

This Player comes with a dedicated cable holder so that the HDMI cable does not place direct weight and stress on the terminal. When connecting the HDMI cable, be sure to pass the cable through the cable holder and secure it.


#### CAUTION

- Do not pull on the HDMI cable when it is connected to the terminal, as this can damage the terminal or cause a poor connection.

- Press down on the tab and pull it towards you.
- Pass the HDMI cable (commercially available) through the cable holder.
- Press in on the tab until it clicks into position.

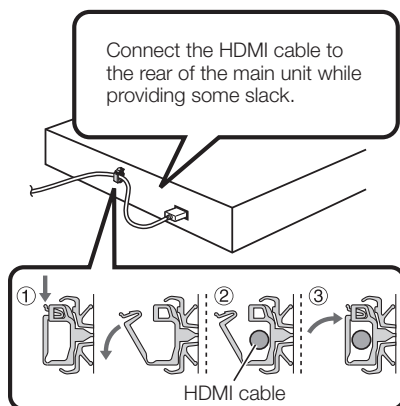

## Remote Control Unit

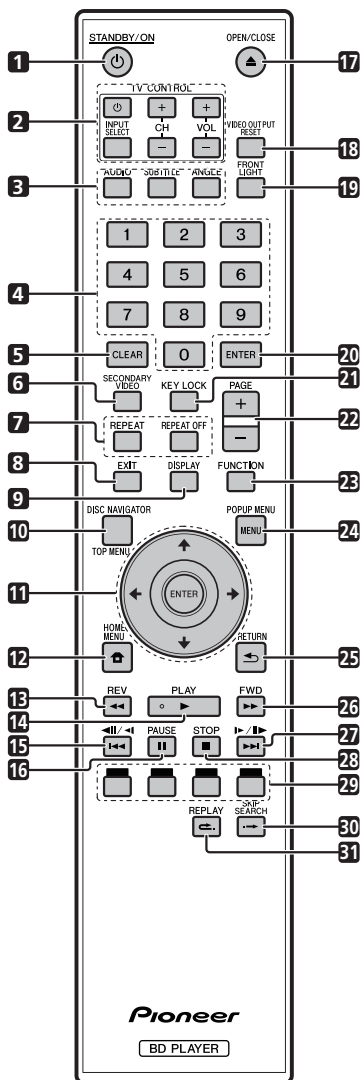

- 1 ⏻ STANDBY/ON (p. 20)
- 2 TV CONTROL buttons (p. 21)
- 3 AUDIO (p. 31), SUBTITLE (p. 31), ANGLE (p. 32)
- 4 Number buttons (p. 35)
- 5 CLEAR (p. 35)
- 6 SECONDARY VIDEO (p. 26)
- 7 REPEAT (pp. 30, 31), REPEAT OFF (pp. 30, 31)
- 8 EXIT (pp. 20, 36)
- 9 DISPLAY (pp. 24, 31)
- 10 TOP MENU/DISC NAVIGATOR (pp. 25, 27)
- 11 Cursor buttons (↑/↓/←/→), ENTER (pp. 21, 36)
- 12 HOME MENU (pp. 21, 36)
- 13 ◀◀ REV (p. 30)
- 14 ▶▶ PLAY (p. 24)
- 15 ◀◀/◀/▶/▶▶ (pp. 27, 30)
- 16 ⏸ PAUSE (p. 30)
- 17 ▲ OPEN/CLOSE (p. 24)
- 18 VIDEO OUTPUT RESET (p. 37)
- 19 FRONT LIGHT (p. 23)
- 20 ENTER (pp. 21, 36)
- 21 KEY LOCK (See below.)
- 22 PAGE +/- (p. 27)
- 23 FUNCTION (p. 34)
- 24 POPUP MENU/MENU (p. 25)
- 25 ↩ RETURN (p. 30)
- 26 ▶▶ FWD (p. 30)
- 27 ▶▶/▶/▶▶ (pp. 27, 30)
- 28 ■ STOP (p. 24)
- 29 RED, GREEN, YELLOW, BLUE (pp. 27, 33)
- 30 🔍 SKIP SEARCH (p. 30)
- 31 ⏮ REPLAY (p. 30)

## Keylock function

You can set the keylock to prevent accidental operations. This function allows TVs compatible with KURO LINK to also perform a Key Lock on the player.

Press and hold **KEY LOCK** for more than 5 seconds.

- Each time you perform this operation, the function is activated or deactivated.
- If you try to operate the Player while the keylock function is set, "Hold" blinks on the front display panel to indicate that the keylock function is set.

Hold

## NOTE

- This remote control unit is equipped with two **ENTER** buttons (11 and 20 listed above).

# Introduction to Connections

Be sure to turn off the power and unplug the power cord from the power outlet whenever making or changing connections. This Player is equipped with the terminals/jacks listed below. Find the corresponding terminal/jack on your video equipment. Using the supplied cable or commercially available cables, connect the video first. Then connect the audio.

## Video terminals/jacks on this Player


Higher Quality

① HDMI OUT terminal



Page 14

 ② COMPONENT VIDEO OUTPUT jacks



Page 15

③ VIDEO OUTPUT jack



Page 16

Standard Quality

## Audio terminals/jacks on this Player

### Digital audio connection

Higher Quality

① HDMI OUT terminal



Page 14

② DIGITAL OUT OPTICAL terminal



Page 17

Standard Quality

### Analog audio connection

Standard Quality

AUDIO OUTPUT jacks



Page 17

## Broadband Internet connection

LAN terminal



Page 18

# Video Connections

 
## Connecting to the HDMI Terminal

- You can enjoy high quality digital picture and sound through the HDMI terminal.
- See page 45 for information on the output of next generation audio formats.
- Use High Speed HDMI™ cables when using the KURO LINK function. The KURO LINK function may not operate properly if other HDMI cables are used.

### STEPS

- 1 Be sure to turn off this Player and the equipment before making any connections.
- 2 Firmly connect an HDMI cable (commercially available) to the HDMI terminals (① and ②).

#### This Player



- When using an HDMI output, 7.1 ch Digital Output is available.

#### Video signal outputs:

1080p	24 Hz	720p	50/60 Hz
1080p	50/60 Hz	576p	50 Hz
1080i	50/60 Hz	480p	60 Hz

#### For example;

1080p: 1080 progressive scan  
1080i: 1080 interlace scan

① To HDMI OUT terminal

HDMI cable  
(commercially available)

② To HDMI IN terminal



Projector

TV

AV receiver

#### Equipment with an HDMI terminal

### NOTE

- Audio transmitted in DTS-HD High Resolution Audio and DTS-HD Master Audio formats is output from the HDMI terminal as Bitstream. Connect an amplifier with a built-in decoder to enjoy the fine sound quality.

## Selecting the priority video output when connecting HDMI and Component video

When you connect both an HDMI cable and a component cable to this player, you need to select the priority video output in "Settings" – "Audio Video Settings" – "Video Out Select". (See page 37.)

### NOTE

- When you connect the player to a Pioneer TV with an HDMI cable only and the TV is turned on, the video output switches to HDMI automatically. (The above setting is unnecessary.)
  - When you connect the player to a TV with an HDMI cable, "HDMI Video Out" is set to "Auto". If you don't get a stable image, select the desired resolution". When you set "HDMI Video Out" to a setting other than "Auto", you can only select resolutions\* that are compatible with the connected TV.
- \* Refer to "HDMI Video Out" on page 37 regarding the resolutions of the HDMI video output.

## After connecting


- Secure the HDMI cable to the HDMI cable holder, passing it through the holder. (Page 11)
- If desired, connect audio equipment. (Page 17)
- Load a disc and start playback. (Pages 24–29)
- Refer to KURO LINK function. (Pages 23 and 38)



Connecting to the Component Jacks

You can enjoy accurate color reproduction and high quality images through the component jacks.

- STEPS**
- 1 Be sure to turn off this Player and the equipment before making any connections.
  - 2 Firmly connect a component video cable (commercially available) to the component jacks (① and ②).

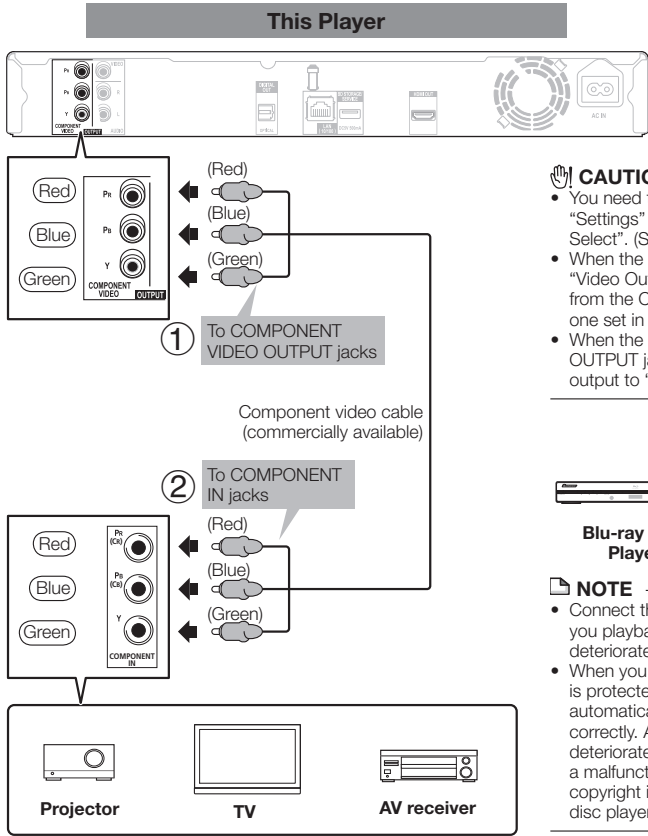


Video signal outputs:

1080i	50/60 Hz	576i	50 Hz
720p	50/60 Hz	480p	60 Hz
576p	50 Hz	480i	60 Hz

For example;  
480p: 480 progressive scan  
480i: 480 interlace scan

- CAUTION**
- You need to select the priority video output in "Settings" - "Audio Video Settings" - "Video Out Select". (See page 37.)
  - When the priority video output is set to "HDMI" in "Video Out Select", the video resolution which is output from the COMPONENT VIDEO OUTPUT jacks is the one set in "HDMI Video Out". (See page 37.)
  - When the output from the COMPONENT VIDEO OUTPUT jacks is prioritized, set the priority video output to "Component".

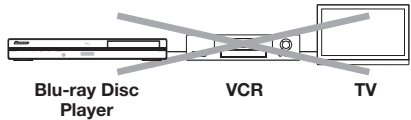

- NOTE**
- Connect the Blu-ray disc player to TV directly. If you playback the image via VCR, the image may deteriorate due to the copy guard function.
  - When you record the program where copyright is protected, the copy guard function is activated automatically; the program can not be recorded correctly. Also, the playback image via VCR may deteriorate due to this function. However, this is not a malfunction. When you watch the program where copyright is protected, we recommend that the Blu-ray disc player be connected to TV directly.

Video equipment with component jacks


- After connecting**
- Connect audio equipment or the audio terminals of the TV. (Page 17)

## Connecting to the Video Jack

You can enjoy the images through the video jack.

### STEPS

- 1 Be sure to turn off this Player and the equipment before making any connections.
- 2 Firmly connect an AV cable (supplied) to the video jacks (1) and (2).

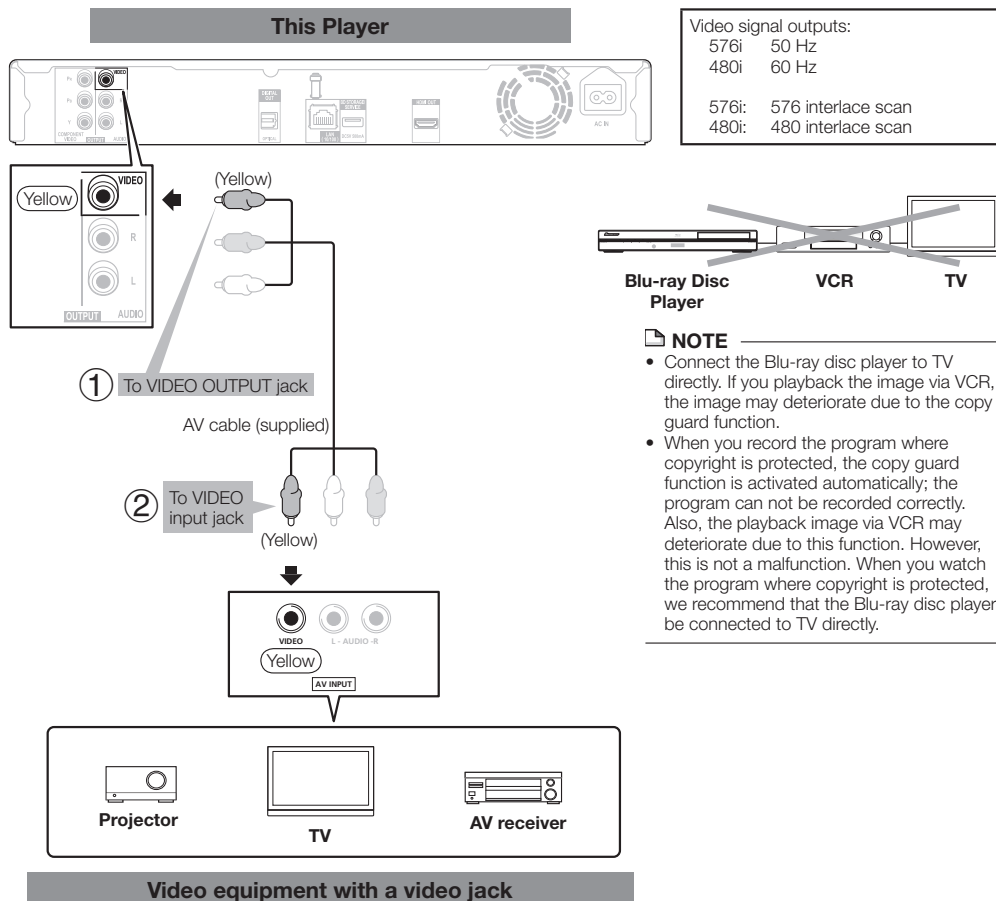

### NOTE

- Connect the Blu-ray disc player to TV directly. If you playback the image via VCR, the image may deteriorate due to the copy guard function.
- When you record the program where copyright is protected, the copy guard function is activated automatically; the program can not be recorded correctly. Also, the playback image via VCR may deteriorate due to this function. However, this is not a malfunction. When you watch the program where copyright is protected, we recommend that the Blu-ray disc player be connected to TV directly.

### After connecting

- Connect audio equipment or the audio terminals of the TV. (Page 17)

# Audio Connections


## Connecting to the Digital Audio Terminal or Audio Jacks

- You can connect audio equipment or the TV to the DIGITAL OUT OPTICAL terminal or AUDIO OUTPUT jacks.
- See page 45 for information on the output of next generation audio formats.

### STEPS

- 1 Be sure to turn off this Player and the equipment before making any connections.
- 2 Firmly connect an optical digital cable (commercially available) or AV cable (supplied) to the optical digital audio terminals or audio jacks (① and ②, or ③ and ④).

Connection

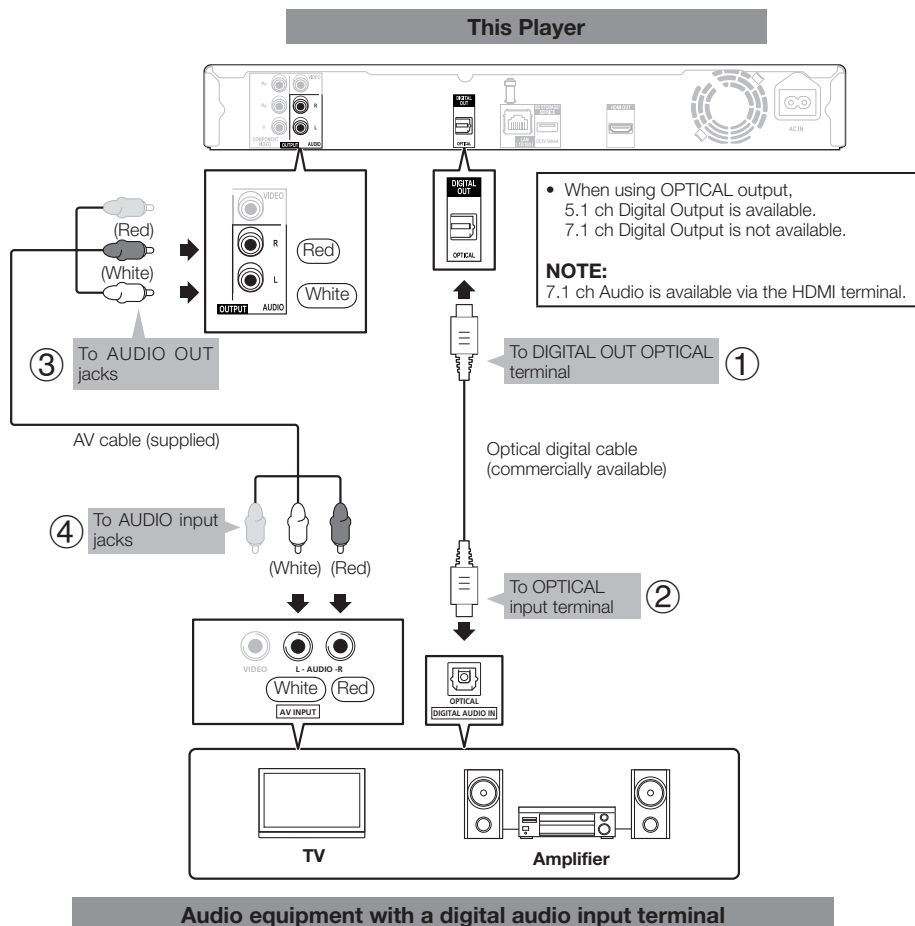

### After connecting

- Load a disc and start playback. (Pages 24–29)


# Broadband Internet Connection

## Connecting to the LAN terminal

- You can enjoy a variety of contents with interactive functions by connecting to the internet when playing BD-LIVE compatible discs. Refer to pages 26 and 39 regarding further information on BD-LIVE functions.
- When using the internet, a broadband internet connection as shown below is required.

### STEPS

- 1 Be sure to turn off this Player and the equipment before making any connections.
- 2 Firmly connect a LAN cable (commercially available) to the LAN terminal (① and ②).

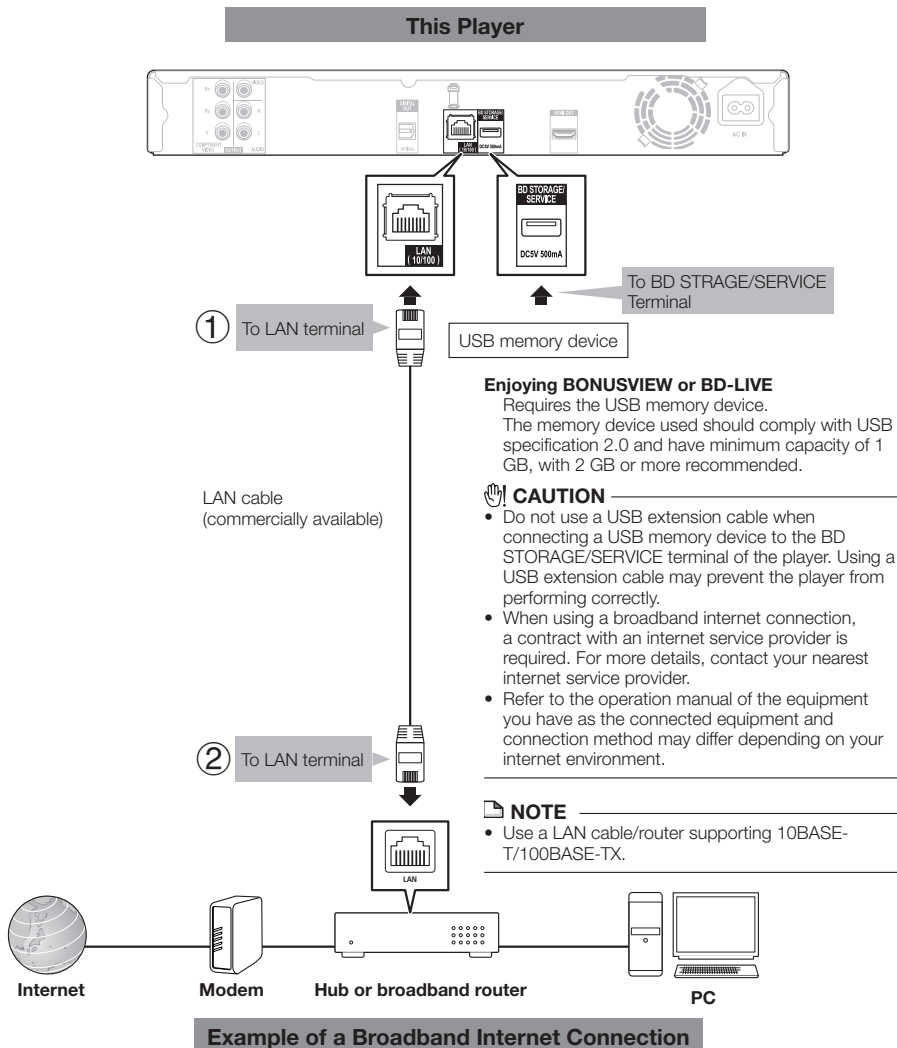


### After connecting

- Perform the communication setting. (Pages 40–42)
- Load a BD-LIVE compatible disc and play back the contents. (Pages 24 and 26)


# Before Starting Playback

## Loading the Batteries in the Remote Control


- 1 Open the rear cover.

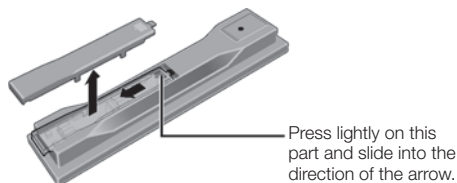

- 2 Insert the batteries (AA/R6 x 2). Insert as indicated by the  $\oplus/\ominus$  marks into the battery compartment.

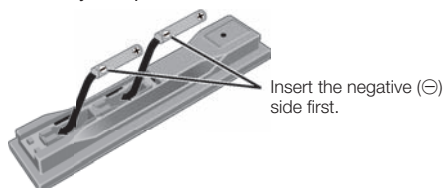

- 3 Close the rear cover. Close securely (a click should be heard).

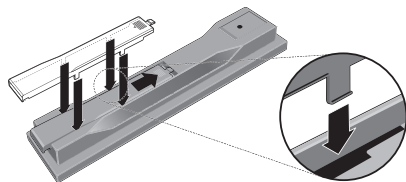


### CAUTION

- Do not use any batteries other than the ones specified. Also, do not use a new battery together with an old one.
- When loading the batteries into the remote control, set them in the proper direction, as indicated by the polarity marks ( $\oplus$  and  $\ominus$ ).
- Do not heat batteries, disassemble them, or throw them into flames or water.
- Batteries may have different voltages, even if they look similar. Do not use different kinds of batteries together.
- To prevent leakage of battery fluid, remove the batteries if you do not plan to use the remote control for a long period of time (1 month or more). If the fluid should leak, wipe it carefully off the inside of the case, then insert new batteries. If a battery should leak and the fluid should get on your skin, flush it off with large quantities of water.
- When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area.

### WARNING


Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

## Approximate operating range of remote control

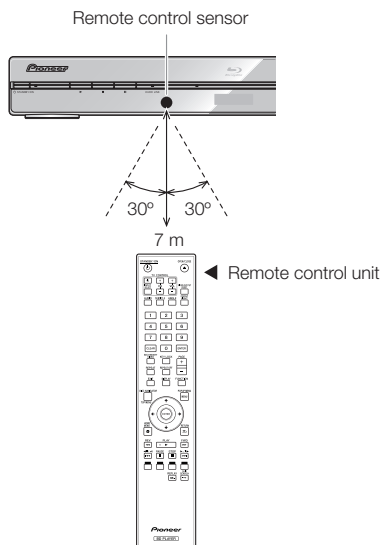

## Connecting the Power Cord

Plug the supplied AC cord into the AC IN terminal on the rear of the Player. Then plug into AC outlet.


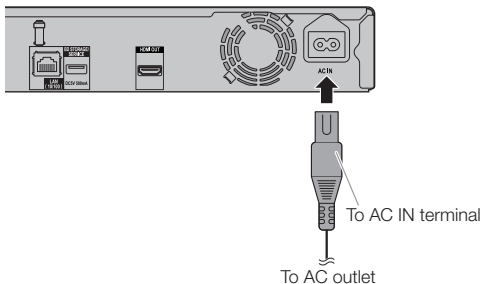


### NOTE

- Place the Player close to the AC outlet, and keep the power plug within reach.
- TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH THE UN-INSULATED PARTS OF ANY CABLES WHILE THE AC CORD IS CONNECTED.
- The STANDBY/ON indicator blinks while the Player is preparing for starting up. You cannot turn the Player on until the STANDBY/ON indicator stops blinking.
- If you are not going to use this Player for a long period of time, be sure to remove the AC cord from the AC outlet.

# Before Starting Playback

## Turning the Power On

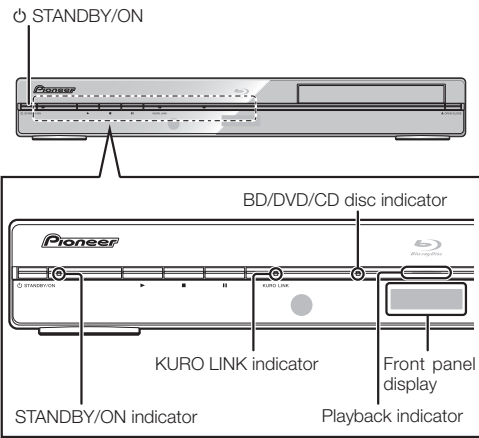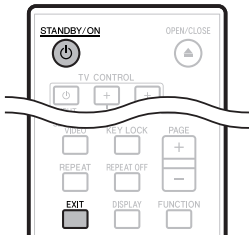


## Turning the power on

Press **STANDBY/ON** on the remote control or on the Player to turn on the power of the Player.



## Entering standby

 Press **STANDBY/ON** on the remote control or on the Player to enter standby.



- If you press **STANDBY/ON** again immediately after entering standby, the Player may not turn on. If this happens, wait for 10 seconds or more and then turn on the power again.

**NOTE**

- When the STANDBY/ON indicator is blinking (may take some time), the Player cannot be turned on.

## Indicators on the Player

STANDBY/ON indicator	
Blue on	Power on
Red blinks	Preparing for standby
Red on	Standby


KURO LINK indicator	
Red on	Output the optimum picture quality for "KURO" (See page 23.)

BD/DVD/CD disc indicator	
Off	No disc
White on	Disc stopped
White blinks	Loading a disc

Playback indicator	
Blue on	Playing back

- When you turn on the power, the Menu screen automatically displays for a while.  
Press **EXIT** to erase the display.

## Language Setting

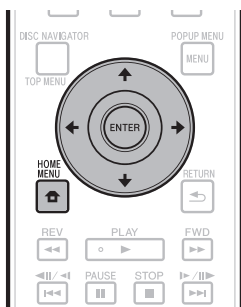


## Changing the on-screen display language


- 1 Press **HOME MENU** to display the Home Menu screen.



- 2 Press **↑/↓/←/→** to select "On Screen Language", then press **ENTER**.

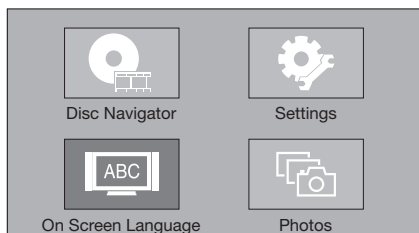

- 3 Press **↑/↓** to select the language you want to display on the screen, then press **ENTER**.

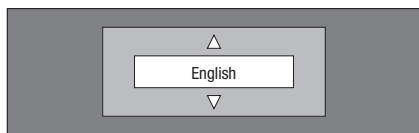

English	Nederlands	Česky
Deutsch	Svenska	Magyar
Français	Dansk	Slovensky
Italiano	Norsk	Slovenščina
Español	Suomi	
Português	Polski	

### NOTE


- To select the DVD disc language, such as subtitle language, etc., see page 25.

## Operating the TV with the player's remote control

When the manufacturer code for your brand of TV is set on the player's remote control, the TV can be operated using the player's remote control.

### CAUTION

- For some models it may not be possible to operate the TV with the player's remote control, even for TVs of brands listed on the manufacturer code list.
- The setting may be restored to the default after the batteries are replaced. If this happens, reset it.

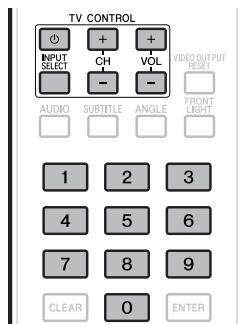

- 1 Input the 2-digit manufacturer code.

- Press the number buttons (0 to 9) to input the code while pressing **TV CONTROL**  $\phi$ .

### NOTE

- The factory setting is 00 (PIONEER).
- If you make a mistake when inputting the code, release **TV CONTROL**  $\phi$  then start over from the beginning.
- When there are multiple codes for a manufacturer, try inputting them in the indicated order until the TV can be operated.

- 2 Check that the TV can be operated.

- Operate the TV using **TV CONTROL**.  
 $\phi$  – Press to turn the TV's power on and off.  
**INPUT SELECT** – Press to switch the TV's input.  
**CH +/-** – Press to select the TV channel.  
**VOL +/-** – Press to adjust the volume.

## TV Preset code list

### Manufacturer Code(s)

<b>PIONEER</b> 00, 31, 32, 07, 36, 42, 51	<b>BEON</b> 07
<b>ACURA</b> 44	<b>BLAUPUNKT</b> 31
<b>ADMIRAL</b> 31	<b>BLUE SKY</b> 41
<b>AIWA</b> 60	<b>BLUE STAR</b> 18
<b>AKAI</b> 32, 35, 42	<b>BPL</b> 18
<b>AKURA</b> 41	<b>BRANDT</b> 36
<b>ALBA</b> 07, 39, 41, 44	<b>BTC</b> 41
<b>AMSTRAD</b> 42, 44, 47	<b>BUSH</b> 07, 41, 42, 44, 47, 56
<b>ANITECH</b> 44	<b>CASCADE</b> 44
<b>ASA</b> 45	<b>CATHAY</b> 07
<b>ASUKA</b> 41	<b>CENTURION</b> 07
<b>AUDIOGONIC</b> 07, 36	<b>CGB</b> 42
<b>BASIC LINE</b> 41, 44	<b>CIMLINE</b> 44
<b>BAUR</b> 31, 07, 42	<b>CLARIVOX</b> 07
<b>BEKO</b> 38	<b>CLATRONIC</b> 38
	<b>CONDOR</b> 38

(Continued on the next page)

## Before Starting Playback


CONTEC 44  
CROSLEY 32  
CROWN 38, 44  
CRYSTAL 42  
CYBERTRON 41  
DAEWOO 07, 44, 56  
DAINICHI 41  
DANSAI 07  
DAYTON 44  
DECCA 07, 48  
DIXI 07, 44  
DUMONT 53  
ELIN 07  
ELITE 41  
ELTA 44  
EMERSON 42  
ERRES 07  
FERGUSON 07, 36, 51  
FINLANDIA 35, 43, 54  
FINLUX 32, 07, 45, 48, 53, 54  
FIRSTLINE 40, 44  
FISHER 32, 35, 38, 45  
FORMENTI 32, 07, 42  
FRONTECH 31, 42, 46  
FRONTECH/PROTECH 32  
FUJITSU 48  
FUNAI 40, 46, 58  
GBC 32, 42  
GE 00, 01, 08, 07, 10, 11, 17, 02, 28, 18  
GEC 07, 34, 48  
GELOSO 32, 44  
GENERAL 29  
GENEXXA 31, 41  
GOLDSTAR 10, 23, 21, 02, 07, 50  
GOODMANS 07, 39, 47, 48, 56  
GORENJE 38  
GPM 41  
GRAETZ 31, 42  
GRANADA 07, 35, 42, 43, 48  
GRADIENTE 30, 57  
GRANDIN 18  
GRUNDIG 31, 53  
HANSEATIC 07, 42  
HCM 18, 44  
HINARI 07, 41, 44  
HISAWA 18  
HITACHI 31, 33, 34, 36, 42, 43, 54, 06, 10, 24, 25, 18  
HUANYU 56  
HYPSON 07, 18, 46  
ICE 46, 47  
IMPERIAL 38, 42  
INDIANA 07  
INGELEN 31  
INTERFUNK 31, 32, 07, 42  
INTERVISION 46, 49  
ISUKAI 41  
ITC 42  
ITT 31, 32, 42  
JEC 05  
JVC 13, 23  
KAISUI 18, 41, 44  
KAPSCH 31  
KENDO 42  
KENNEDY 32, 42  
KORPEL 07  
KOYODA 44  
LEYCO 07, 40, 46, 48  
LIESEN&TTER 07  
LOEWE 07  
LUXOR 32, 42, 43  
M-ELECTRONIC 31, 44, 45, 54, 56, 07, 36, 51  
MAGNADYNE 32, 49  
MAGNAFON 49  
MAGNAVOX 07, 10, 03, 12, 29  
MANESTH 39, 46  
MARANTZ 07  
MARK 07  
MATSUI 07, 39, 40, 42, 44, 47, 48  
MCMICHAEL 34  
MEDIATOR 07  
MEMOREX 44  
METZ 31  
MINERVA 31, 53  
MITSUBISHI 09, 10, 02, 21, 31  
MULTITECH 44, 49  
NEC 59  
NECKERMANN 31, 07  
NEI 07, 42  
NIKKAI 05, 07, 41, 46, 48  
NOBLIKO 49  
NOKIA 32, 42, 52  
NORDMENDE 32, 36, 51, 52  
OCEANIC 31, 32, 42  
ORION 32, 07, 39, 40  
OSAKI 41, 46, 48  
OSO 41  
OSUME 48  
OTTO VERSAND 31, 32, 07, 42  
PALLADIUM 38  
PANAMA 46  
PANASONIC 31, 07, 08, 42, 22  
PATHO CINEMA 42  
PAUSA 44  
PHILCO 32, 42  
PHILIPS 31, 07, 34, 56, 68  
PHOENIX 32  
PHONOLA 07  
PROFEX 42, 44  
PROTECH 07, 42, 44, 46, 49  
QUELLE 31, 32, 07, 42, 45, 53  
R-LINE 07  
RADIOLA 07  
RADIOSHACK 10, 23, 21, 02  
RBM 53  
RCA 01, 10, 15, 16, 17, 18, 61, 62, 09  
REDIFFUSION 32, 42  
REX 31, 46  
ROADSTAR 41, 44, 46  
SABA 31, 36, 42, 51  
SAISHO 39, 44, 46  
SALORA 31, 32, 42, 43  
SAMBERS 49  
SAMSUNG 07, 38, 44, 46, 69, 70  
SANYO 35, 45, 48, 21, 14, 91  
SBR 07, 34  
SCHAUB LORENZ 42  
SCHNEIDER 07, 41, 47  
SEG 42, 46  
SEI 32, 40, 49  
SELECO 31, 42  
SHARP 02, 19, 27, 67, 90  
SIAREM 32, 49  
SIEMENS 31  
SINUDYNE 32, 39, 40, 49  
SKANTIC 43  
SOLAVOX 31  
SONOKO 07, 44  
SONOLOR 31, 35  
SONTEC 07  
SONY 04  
SOUNDWAVE 07  
STANDARD 41, 44  
STERN 31  
SUSUMU 41  
SYSLINE 07  
TANDY 31, 41, 48  
TASHIKO 34  
TATUNG 07, 48  
TEC 42  
TELEAVIA 36  
TELEFUNKEN 36, 37, 52  
TELETECH 44  
TENSAI 40, 41  
THOMSON 36, 51, 52, 63  
THORN 31, 07, 42, 45, 48  
TOMASHI 18  
TOSHIBA 05, 02, 26, 21, 53  
TOWADA 42  
ULTRAVOX 32, 42, 49  
UNIDEN 92  
UNIVERSUM 31, 07, 38, 42, 45, 46, 54  
VESTEL 07  
VICTOR 13  
VOXSON 31  
WALTHAM 43  
WATSON 07  
WATT RADIO 32, 42, 49  
WHITE WESTINGHOUSE 07  
YOKO 07, 42, 46  
ZENITH 03, 20



## Before Starting Playback

### Turning Off the LCD Backlight and Indications

If you feel that the indicators on the Player are too bright when watching movies, you can turn them off except for the STANDBY/ON indicator.

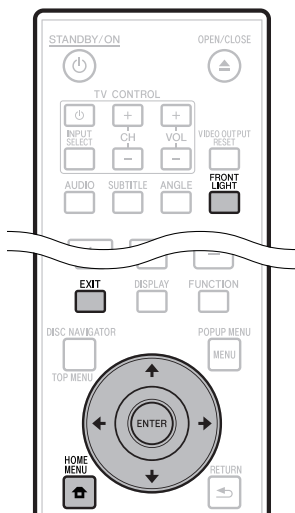

### Operate using the remote control unit

Press **FRONT LIGHT** to turn the LCD backlight on or off.

### HOME MENU operation

- 1 Press **HOME MENU** to display the Home Menu screen.
- 2 Press **↑/↓/←/→** to select "Settings", then press **ENTER**.
- 3 Press **↑/↓** to select "Front Display/LED", then press **ENTER**.

Audio Video Settings
Quick Start
Auto Power Off
KURO LINK
Playback Setting
Communication Setup
<b>Front Display/LED</b>
Version
USB Memory Management
Software Update
System Reset

- 4 Press **←/→** to select "On" or "Off", then press **ENTER**.
- 5 Press **HOME MENU** or **EXIT** to exit.

### About KURO LINK function

The functions work when a Pioneer KURO LINK-compatible Flat Screen TV, AV system (AV receiver or amplifier, etc.) or HD AV Converter is connected to the player using an HDMI cable. Also refer to the operating instructions of the Flat Screen TV, AV system (AV receiver or amplifier, etc.) and HD AV Converter.

### To use the KURO LINK function

- The KURO LINK function operates only when "Video Out Select" is set to "HDMI".
- The KURO LINK function operates when KURO LINK is set to On for all devices connected with HDMI cables.
- Once connections and the settings of all the devices are finished, be sure to check that the player's picture is output to the Flat Screen TV. (Also check after changing the connected devices and reconnecting HDMI cables.) The KURO LINK function may not operate properly if the player's picture is not properly output to the Flat Screen TV.
- Use High Speed HDMI™ cables when using the KURO LINK function. The KURO LINK function may not operate properly if other HDMI cables are used.
- For some models, the KURO LINK function may be referred to as "HDMI Control".
- The KURO LINK function does not work with devices of other brands, even if connected with an HDMI cable.

### What the KURO LINK function can do

- **Outputting the optimum picture quality for "KURO" from the player.**

When the KURO LINK function is enabled, video signals with the optimum picture quality for "KURO" are output from the player's HDMI terminal.

The KURO LINK indicator on the player lights red.

KURO LINK indicator



- **Operating the player with the Flat Screen TV's remote control.**

Such player operations as starting and stopping playback and displaying the menus can be performed from the Flat Screen TV.

- **The player's playback picture is displayed on the Flat Screen TV's screen. (Auto-select function)**

The input switches automatically on the Flat Screen TV, AV system (AV receiver or amplifier, etc.) and HD AV Converter when playback is started on the player or the Home Menu or Disc Navigator is displayed. When the input is switched, the playback picture, the Home Menu or Disc Navigator appears on the Flat Screen TV.

- **The power of the Flat Screen TV and the player turns on and off automatically. (Simultaneous power function)**

When playback on the player is started or the Home Menu or Disc Navigator is displayed, if the Flat Screen TV's power was off, its power turns on automatically. When the Flat Screen TV's power is turned off, the player's power automatically turns off.

 
- **The player's on-screen display language switches automatically. (Unified language function)**

When the language information from a connected Flat Screen TV is received, you can have the player's on-screen display language change automatically to that of the Flat Screen TV. This function is available only when playback is stopped and the menu screen is not displayed.

# BD/DVD/CD Playback


This section explains playback of commercially available BD Video and DVD Video discs (like movies), CDs, and recorded BD-RE/-R, DVD-RW/-R discs.

## Loading a Disc



⏻ STANDBY/ON      ▲ OPEN/CLOSE

- 1 Press ⏻ **STANDBY/ON** to turn on the power.
- 2 Press ▲ **OPEN/CLOSE** to open the disc tray.
- 3 Load a disc on the disc tray.
  - Insert the disc with the label face up.
  - In case of disc recorded on both sides, face down the side to play back.

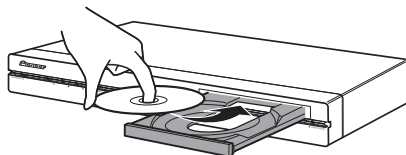

- 4 Press ▲ **OPEN/CLOSE** to close the disc tray.

## BD/DVD Video Playback

**BD VIDEO** **BD-RE** **BD-R**

**DVD VIDEO** **DVD-RW** **DVD-R** **AVCHD**

This player supports DVD upscaling during DVD playback.



- 1 Load a disc.
  - Playback may begin automatically, depending on the disc.
  - Playback begins from the first title.
  - The menu may be displayed first, depending on the disc. Perform playback operation by following the directions on the screen.
- 2 Press ► **PLAY** if playback does not begin automatically or playback is stopped.

### NOTE

- The disc load time may vary depending on the disc.

## To stop playback

Press ■ **STOP**.

 
## Resume playback function

- If you press ► **PLAY** next, playback will resume from the point where the Player was previously stopped. To playback from the beginning, cancel resume mode by pressing ■ **STOP**, then press ► **PLAY**. (This may not work depending on the type of disc. In this case, open the disc tray or enter standby.)

### NOTE

- Resume playback may not function depending on the disc.


## Displaying the disc information




Press **DISPLAY** during playback.

- Each time you press **DISPLAY**, the display switches as follows.

Disc Information Screen A

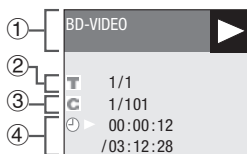

Disc Information Screen B

 

No Display


- ① Type of disc
- ② Title number being played/Total number of Titles
- ③ Chapter number being played/Total number of Chapters
- ④ Elapsed playback time/Total playback time for the Title

### NOTE

- Disc Information Screen A disappears after about 1 minute elapses without performing any operations.
- For some commercially-released BD VIDEO discs, the total playback time display for the Chapter/Title may not appear.

## BD/DVD Menus


- This section explains how to play back a BD/DVD video disc with a top menu, disc menu or pop-up menu.
- The titles listed in the top menu and a disc guide (for options like subtitles and audio languages) are given in the disc menu.

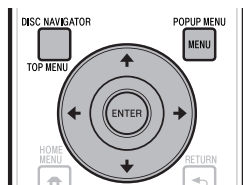

## Start playback by selecting a title from the top menu

BD VIDEO DVD VIDEO

- 1 Press **TOP MENU/DISC NAVIGATOR**.
  - The top menu screen is displayed if present on the BD/DVD video disc.

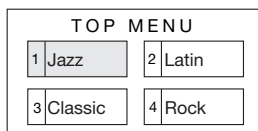

- 2 Press **↑/↓/←/→** to select the title, then press **ENTER**.
  - The selected title is played back.

### NOTE

- The procedure explained on this page is the basic operation procedure. Procedures vary depending on the BD/DVD video disc, so you may need to follow the instructions in the BD/DVD video disc manual or the instructions displayed on the screen.

### Top menu


- With some BD/DVD discs, the top menu may be referred to as the "Title Menu". Use **TOP MENU/DISC NAVIGATOR** on the remote control when the instructions refer to "Title Menu".
- If no top menu is available, the **TOP MENU/DISC NAVIGATOR** button will have no effect.

## Using the disc menu

DVD VIDEO

**Example:** Select "SUBTITLE LANGUAGE".

- 1 Press **TOP MENU/DISC NAVIGATOR**.
  - The disc menu screen is displayed if present on the DVD video disc.
- 2 Press **↑/↓** to select "SUBTITLE LANGUAGE", then press **ENTER**.
  - The screen for selecting the subtitle language is displayed.

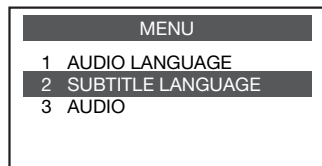


- 3 Press **↑/↓** to select the subtitle language, then press **ENTER**.
- 4 Press **TOP MENU/DISC NAVIGATOR** to exit.

## Using the pop-up menu

BD VIDEO

- 1 Press **POPUP MENU/MENU** during playback.
  - The pop up menu screen is displayed.
  - The menu contents displayed vary depending on the disc. For details on how to see and operate the pop-up menu, refer to the manual for the disc.

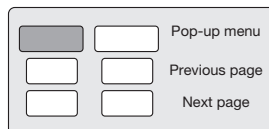

- 2 Press **↑/↓/←/→** to select the desired item, then press **ENTER**.
- 3 Press **POPUP MENU/MENU** to exit.
  - The pop-up menu will automatically disappear for some discs.

### Enjoying BONUSVIEW or BD-LIVE

#### BD VIDEO

This Player is compatible with additional functions of BD-Video, BONUSVIEW (BD-ROM Profile 1 Version 1.1) and BD-LIVE.

When using BD-Video discs compatible with BONUSVIEW, you can enjoy such functions as secondary video (picture in picture) and secondary audio, as well as subtitles and previews. When playing discs supporting BD-LIVE, special video images and other data can be downloaded from the Internet.

Data recorded on BD video and downloaded from BD-LIVE is stored on the USB memory device (external memory). To enjoy these functions, connect a USB memory device (minimum 1 GB capacity (2 GB or more recommended)) supporting USB 2.0 High Speed (480 Mbit/s) to the BD STORAGE/SERVICE terminal (page 11) on the back of this player.

- To recall data stored in the USB memory device, first insert the disc media that was being used at the time the data was downloaded (if a different disc is loaded, the data stored on the USB memory device cannot be played).
- If a USB memory device containing other data (previously recorded) is used, the video and audio may not play back properly.
- If the USB memory device is disconnected from this player during playback, playback of the disc will stop. Do not disconnect the USB memory device while playback is in progress.
- Some time may be required for the data to load (read/write).

#### CAUTION

- It may not be possible to use the BD-LIVE functions if there is insufficient space on the USB memory device. In this case, refer to "USB Memory Management" on page 43 for erasing the Virtual Package data and the BD-LIVE data in the USB memory device.

#### NOTE

- Operation of USB memory devices is not guaranteed.
- Playback of BD-LIVE function data differs depending on the disc used. For details, consult the user instructions supplied with the disc. (pages 18 and 40.)
- To enjoy the BD-LIVE function, a network connection and settings are required (pages 19 and 40).
- For conditions and restrictions regarding Internet connections using the BD-LIVE function, see the section "BD Internet Access" (page 39).
- BD-LIVE is a function that provides for automatic connection to the Internet. Discs supporting the BD-LIVE function may send ID codes identifying this player and the disc to the contents provider via the Internet.
- The unit can be set to prevent automatic connection to the Internet. For instructions on this setting, see the section "BD Internet Access" (page 39).

### Secondary video playback

BD-Video that includes secondary audio and video compatible with Picture in Picture can be played back with secondary audio and video simultaneously as a small video in the corner.

- 1 Press **SECONDARY VIDEO** during playback to show the 2-picture screen.



- 2 To remove the secondary video, press **SECONDARY VIDEO** again.

#### NOTE

- To listen to secondary audio, make sure that "Secondary Audio" is set to "On". (See page 37.)
- The secondary audio and video for Picture In Picture may automatically play back and be removed depending on the content. Also, playable areas may be restricted.

### Virtual Package

For BD-Video discs compatible with Virtual Package, data is copied from the discs or internet to local storage. It is automatically copied to the local storage prior to playback. You can enjoy a variety of additional functions including secondary video, secondary audio, subtitles, movie trailers, etc.

- The playback methods vary depending on the disc. For details, refer to the disc manual.

### BD-LIVE

In this Player, a variety of contents with interactive functions are available through BD-LIVE compatible Blu-ray discs by connecting to the internet. You can enjoy the download of bonus features such as latest movie trailers to the USB memory device, communication compatible BD-J interactive games, etc.

- The available functions differ depending on the disc.


#### NOTE

- Regarding playback method of BD-LIVE contents, etc., perform the operations in accordance with the instructions in the BD disc manual.
- To enjoy BD-LIVE functions, perform the broadband internet connection (page 18) and communication settings (pages 40–42).
- Refer to page 39 regarding the setup to restrict access to BD-LIVE contents.

## BD-RE/-R/DVD-RW/-R Playback

**BD-RE** **BD-R** **DVD-RW** **DVD-R**

You can play back a recorded disc (DVD: VR format finalized disc only / BD: BDAV format disc only).

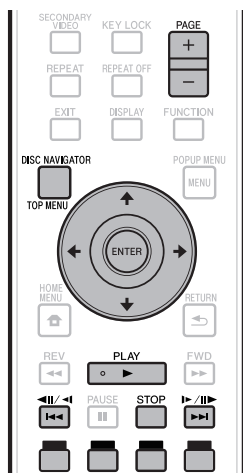


### NOTE

- “Finalize” refers to a recorder processing a recorded disc so that it will play in other DVD players/recorders as well as this player. Only finalized DVD-RW/-R discs will play back in this player. (This player does not have a function to finalize discs.)

## Playback by selecting a title

### 1 Load a recorded disc.

- The Disc Navigator screen is displayed.

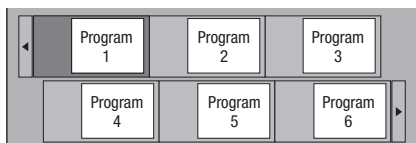

- When loading a BD disc with usage restrictions placed by a BD recorder, the PIN code input screen appears. Then, input your PIN code. If you input a wrong PIN code three times, the disc tray will open. Close the disc tray, and then input a correct PIN code.
- If the Disc Navigator screen is not displayed, press **TOP MENU/DISC NAVIGATOR**.

### 2 Press **↑/↓/←/→** to select the desired title, then press **ENTER**.

- When seven or more titles are displayed, switch pages by pressing **PAGE +/-**. The same operation can be performed by pressing **◀◀/◀||/▶||/▶▶**.
- Playback of the selected title will begin. You can playback by pressing **▶ PLAY** instead of pressing **ENTER**.

### 3 Press **■ STOP** to stop playback.


### NOTE

- The Disc Navigator screen also can be displayed by pressing **TOP MENU/DISC NAVIGATOR** when playback is stopped or by pressing **ENTER** after choosing “**Disc Navigator**” in Home Menu when playback is stopped.


## About Disc Navigator

- The Disc Navigator can be displayed in two types, Thumbnail and Title Name.
- Each time you press **RED**, the screen changes between Thumbnail and Title Name.

### Thumbnail

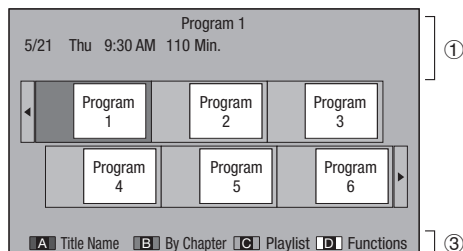

### Title Name

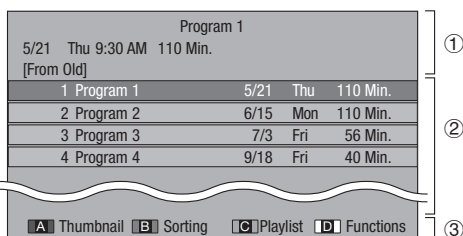


- Information of selected title
- Title Name  
Recording Date  
Recording Duration

- Caption for **RED, GREEN, YELLOW, BLUE** buttons

- When seven or more titles are displayed, switch pages by pressing **PAGE +/-**. The same operation can be performed by pressing **◀◀/◀||/▶||/▶▶**.

## Playback by selecting a chapter

- 1 Press **GREEN** while the Thumbnail screen is displayed.
  - The chapter screen is displayed.

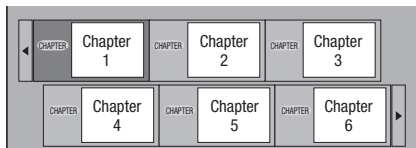


- When seven or more chapters are displayed, switch pages by pressing **PAGE +/-**. The same operation can be performed by pressing **I<<</>>>II** or **I>>>/<<<II**.
  - To return to the Thumbnail screen, press **GREEN**.
- 2 Press **↑/↓/←/→** to select the desired chapter, then press **ENTER**.
    - Playback of the selected chapter will begin.
    - You can playback by pressing **▶ PLAY** instead of pressing **ENTER**.
  - 3 Press **■ STOP** to stop playback.

## Sorting the titles

Each time you press **GREEN**, while the Title Name screen is displayed, the Title Name display changes between displaying the newest title first and the oldest title first.

## Playback by selecting a Playlist


- 1 Press **YELLOW** while the Thumbnail screen is displayed.
  - The Playlist screen is displayed.

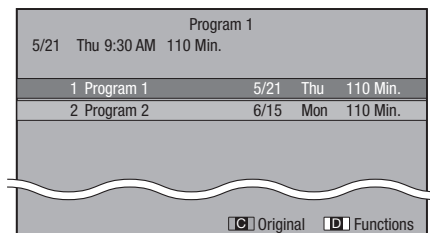

- 2 Press **↑/↓** to select the title, then press **ENTER**.
  - Playback of the selected title will begin.
- 3 Press **■ STOP** to stop playback.

## Playing back the title you stopped while being played


- 1 Press **BLUE** while the Disc Navigator screen is displayed.

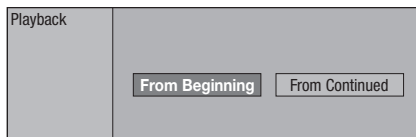

- 2 Press **←/→** to select the type of Playback, then press **ENTER**.
  - Playback of the title will begin.
- 3 Press **■ STOP** to stop playback.


## Audio CD Playback

## AUDIO CD

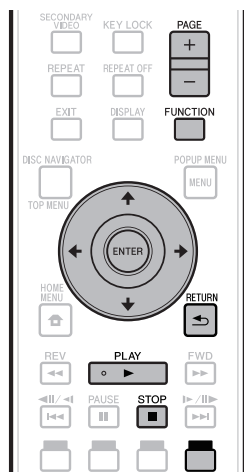

## Playback from the beginning

- 1 Load an audio CD.
  - The CD screen is displayed.  
(The CD screen is displayed only when a compact disc recorded in the CD-DA format is inserted.)
  - Playback may begin automatically, depending on the disc.

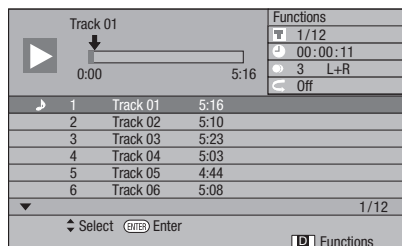

- 2 Press **▶ PLAY** if playback does not begin automatically or playback is stopped.
- 3 Press **■ STOP** to stop playback.

## Resume playback function


- If you press **▶ PLAY** next, playback will resume from the point where the Player was previously stopped. To playback from the beginning, cancel resume mode by pressing **■ STOP**, then press **▶ PLAY**. (This may not work depending on the type of disc. In this case, open the disc tray or enter standby.)

## NOTE

- Resume playback may not function depending on the disc.

## Playback by selecting a track


- 1 Press **↑/↓** to select the track, then press **ENTER** during playback or when playback is stopped.
  - Playback of the selected track will begin.
  - When seven or more tracks are displayed, switch pages by pressing **PAGE +/-**.

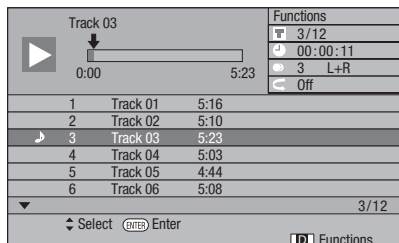

- 2 Press **■ STOP** to stop playback.

## Operation procedure for the "Functions" menu

- 1 Press **BLUE** (Functions) when the CD screen is displayed.
  - The "Functions" menu is activated.


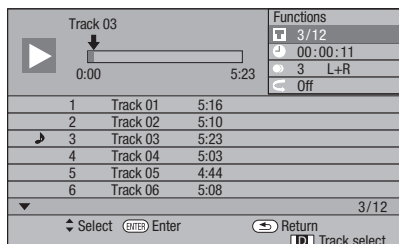


- 2 Press **↑/↓** to select the desired setting, then press **ENTER**.
  - When playback is stopped, only "Track" can be selected.
  - For a description of each setting, see "Functions which can be set" (Page 35).
- 3 Press **↑/↓/←/→** to set, then press **ENTER**.
  - Operations vary depending on the setting. Follow the operation instructions on the screen.
- 4 Press **↵ RETURN** or **BLUE** to exit the "Functions" menu.

## NOTE

 - The displayed items vary depending on the disc.

# Playback Functions

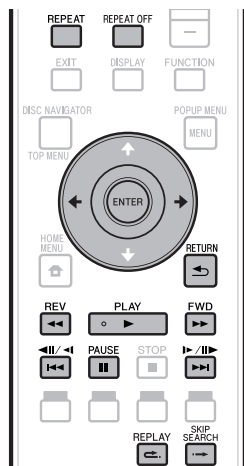

## NOTE

- Some operations in the following playback functions cannot be performed depending on the specifications of the disc.

## Fast Forward/Reverse (Search)

Fast Forward/Reverse functions when **REV** or **FWD** is pressed during playback.

**Example:** When **FWD** is pressed

- The search speed will change each time you press the button.

## Skipping to the Next or the Start of the Current Chapter (Track)

Skipping (to the beginning of a chapter or track) functions when **REV** or **FWD** is pressed during playback.

## Pause/Frame Advance Playback

Pause functions when **PAUSE** is pressed during playback. (If you are playing back an audio CD, the CD will also pause.)

Frame Advance Playback functions when **REV** or **FWD** is pressed during Pause.

- Frame Advance Playback may not function properly with discs other than DVD-RW (VR format).

## NOTE

- Some BD/DVD Video discs are not compatible with Pause/Frame Advance Playback.
- Frame Advance/Reverse Playback can be performed for DVD discs by pressing **REV** or **FWD** during pause (Frame Reverse Playback cannot be performed BD video discs).

## Slow Playback

Slow Playback functions when **REV** or **FWD** is pressed for more than 2 seconds during pause.

- Press **PLAY** to return to normal playback.

## NOTE

- This doesn't work for audio CDs.
- Reverse Slow Playback cannot be performed for BD video and DVD discs in AVCHD format.

## Skip Search

Playback skips 30 seconds ahead when **SKIP SEARCH** is pressed during playback.

## Replay

Playback jumps back 10 seconds when **REPLAY** is pressed during playback.

## Repeat Playback of a Title or Chapter (Repeat Playback)

- Play back the title or chapter you want to repeat.
- Press **REPEAT**.
- Press **REV** or **FWD** to select the type of Repeat Playback.
  - Playback Title: Repeats the title currently being played back.
  - Playback Chapter: Repeats the chapter currently being played back.
  - Scene Selection: Repeats the specified scene of title or chapter.

Playback Title   Playback Chapter   Scene Selection

- Press **RETURN** to cancel without setting the type of Repeat Playback.
- For Audio CD, you can select "Playing Disc", "Playing Track" and "Specify The Part" as Repeat Playback options.

- Press **ENTER**.


**Example:** Repeat playback of a title (TITLE)



**On Title Repeat**

- Press **REPEAT OFF** or **REPEAT** to return to normal playback.



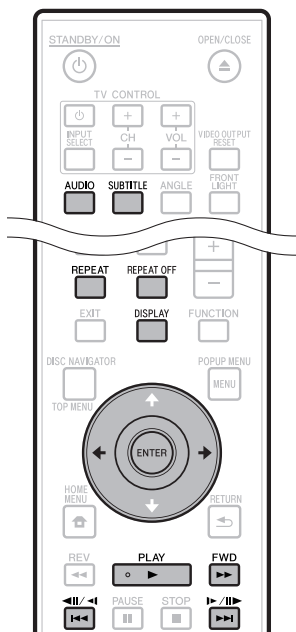

## Partial Repeat Playback (Repeat Playback of a Specified Part)


**DVD VIDEO** **DVD-RW** **DVD-R**

**AUDIO CD**

### NOTE

- Some operations in the following playback function cannot be performed depending on the specifications of the disc.

- Press **REPEAT** during playback.
- Press **◀/▶** to select "Scene Selection", then press **ENTER**.
  - "Set Start Point" displays.

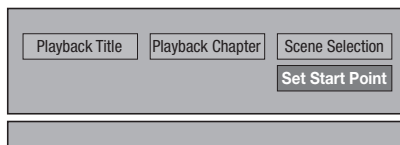

- Press **ENTER** at the scene where you want to set the start point.
  - "Set End Point" displays.
- Press **ENTER** at the scene where you want to set the end point.
  - You can press **▶▶ FWD** to fast forward to the scene where you want to set the end point. When you reach the desired scene, simply press **▶ PLAY** and then **ENTER** to set the end point. To cancel Repeat Playback, press **REPEAT OFF** or **REPEAT**.

### NOTE

- Press **▶▶/▶▶/▶▶/▶▶**, the Repeat Playback is cancelled and the next chapter (track) being play back.
- Press **◀◀/◀◀/◀◀/◀◀** once, the Repeat Playback is cancelled and the player returns to the start of current chapter (track).
- If you press **◀◀/◀◀/◀◀/◀◀** again (within about 5 seconds) the player will skip to the beginning of the previous chapter (track).
- For Partial Repeat Playback, set the start and end points within the same title.
- Repeat Playback may be forbidden depending on the disc.
- During BD video, the same scene cannot be played repeatedly.
- Partial Repeat Playback may not work in multi-angle scenes.
- If you press **DISPLAY**, you can confirm the Repeat Playback status.

## Displaying the Audio Information

You can display the audio information on the disc currently being played back by pressing **AUDIO**.

- The displayed contents vary depending on the disc.

**BD VIDEO** **DVD VIDEO**

The audio track currently being played back will be displayed.

If multiple audio channels are recorded, you can switch the audio channel by pressing **AUDIO**.

**BD-RE** **BD-R** **DVD-RW** **DVD-R**

**In the event bilingual (multiplex) broadcasts are recorded:**

- The display will show "MAIN", "SUB" or "MAIN SUB"

**When a recorded broadcast with stereo or monaural audio is played back:**

- "Stereo" is displayed. (Audio cannot be switched.)

**AUDIO CD**

Each time **AUDIO** is pressed, the audio change as below.

- "L" → "R" → "L+R" → "L"

### NOTE


- When you play a program recorded in stereo or monaural, and if you are listening to the Bitstream sound via the digital output jack, you cannot select the audio channel. Set "Audio Out" to "PCM" (Page 38), or if you want to change the audio channel, listen via the analog output jacks.
- Settig for audio can be changed also in Function Control Screen (Page 34).
- Some discs allow changing of the audio channel via a menu. For details, see the manual for the disc.
- The display for audio automatically disappear after 5 seconds.

Switching Subtitles

If subtitles are provided in multiple languages, you can switch between them.


Press **SUBTITLE** during playback.

- The display indicates the subtitle number currently being played back, and the subtitles appear.
- Each time **SUBTITLE** is pressed, the subtitles change.
- “—” is displayed if a disc has no subtitles.
- You can also select “Off”.

 **NOTE**


- Setting for subtitles can be changed also in Function Control Screen (Page 34).
- Some discs allow changing of the subtitles channel via a menu. For details, see the manual for the disc.
- The display for subtitles automatically disappear after 5 seconds.

Switching the Angle

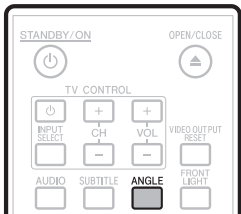

If multiple angles are recorded, you can switch between them.


- 1 Press **ANGLE** during playback.
- The display indicates the angle number currently being played back. Each time you press **ANGLE**, the angle switches.
  - “—” is displayed if a disc is recorded with only one angle.

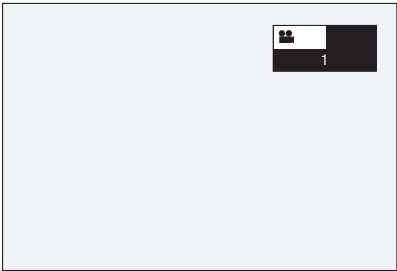

To return to the previous angle, press **ANGLE** to cycle through the angles until you return to the original angle.


Displaying the Angle Mark

You can change settings so that Angle Mark appears in the right bottom part of the screen when multiple angles are recorded. (The Angle Mark is displayed for BD/DVD video.) The settings can be changed in “Settings” - “Playback Setting” - “Angle Mark Display” (Page 39).

 **NOTE**

- Setting for angles can be changed also in Function Control Screen (Page 34).
- Some discs allow changing of the angle channel via a menu. For details, see the manual for the disc.
- The display for angles automatically disappear after 5 seconds.

# JPEG File Playback

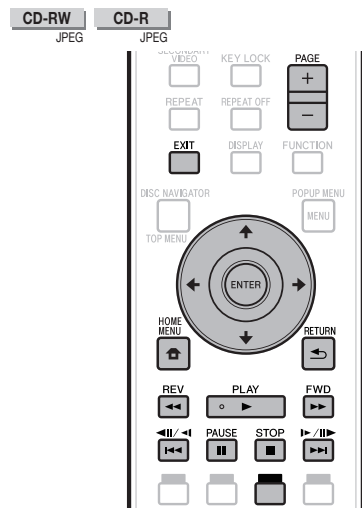

## NOTE


- This Player can play still images (JPEG files) that have been recorded on CD-RW/-R discs. For details on the still images that you can play using this player, refer to "About the JPEG file format" on page 7.
- During "Normal play", still images are played one by one while during "Slide show", they are automatically replaced one after another.
- JPEG files cannot be played back from a USB memory device with this player.

## Playing back still images in sequence

- Load the disc containing the still images, and press **PLAY**.
  - The first still image appears on the screen.
  - Press **◀◀/◀||/▶||/▶▶** or **▶▶/||/▶/||/▶▶** to proceed to the next or previous still image. The same operation can be performed by pressing **◀/▶** or **◀◀ REV/▶▶ FWD**.
- To stop the still image playback at any time, press **STOP**.

## Playing back still images in a selected folder

- Load the disc containing still images, then press **HOME MENU**.
- Press **↑/↓/◀/▶** to select "Photos", then press **ENTER**.
- Use **↑/↓/◀/▶** to select the folder whose still images are to be played, then press **ENTER**.

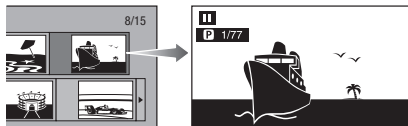

- When seven or more folders are displayed, switch pages by pressing **PAGE +/-**. The same operation

can be performed by pressing **◀◀/◀||/▶||/▶▶** or **▶▶/||/▶/||/▶▶**.


- Press **◀◀/◀||/▶||/▶▶** or **▶▶/||/▶/||/▶▶** to replace one image with another.
  - The same operation can be performed by pressing **◀/▶** or **◀◀ REV/▶▶ FWD**.
  - Press **RETURN** if you wish to return to the folder selection screen.
- To stop the still image playback at any time, press **STOP**.

## Playing back Slide Show

- In Step 2 of the left side "Playing back still images in a selected folder", press **PLAY** (Slide Show).
  - The still images inside the selected folder are played as a slide show.
- To pause the playback at any time, press **PAUSE**.
  - Press **PLAY** to resume playback.
- To stop the play at any time, press **STOP**.
  - Press **RETURN** to play a slide show of still images in another folder.


## Setting slide show speed/repeat playback

- Press **YELLOW** (Slide Show Menu) during the folder selection screen.
  - The setting screen for "Slide Show Speed"/"Repeat Mode Setting" appears.
- Press **↑/↓** to select "Slide Show Speed", then press **ENTER**.

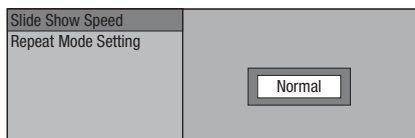

- The slide show speed may be selected from "Fast", "Normal", "Slow1" and "Slow2".

- Press **↑/↓** to select the desired speed, then press **ENTER**.
- Press **↑/↓** to select "Repeat Mode Setting", then press **ENTER**.

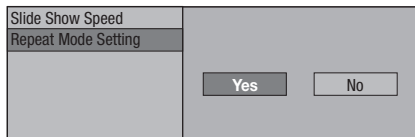


- Press **◀/▶** to select the desired item, then press **ENTER**.
- Press **EXIT** to exit.

# Settings During Playback

## Function Control

This allows you to adjust various settings at once, like subtitles, audio and angle settings and the title selection for Direct Playback. The operations are the same for BD and DVD.

### Function control screen

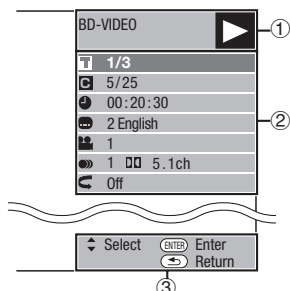

#### ① Playback status display

Shows the operation status and the disc type.

#### ② Setting items


Selects a title (or track) or chapter for playback, or performs subtitle, audio and angle settings.

- Title/Track Number (Direct Title/Track Skip)
- Chapter Number (Direct Chapter Skip)
- Playback Elapsed Time (Direct Time Skip)
- Subtitle Language
- Angle Number
- Audio
- Repeat


#### ③ Operation guide display

Provides help on remote control button operations.

## Function control operation procedure

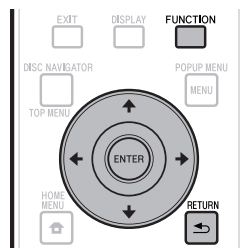

- 1 Press **FUNCTION** during playback.
  - The Function Control screen is displayed on the TV.
- 2 Press **↑/↓** to select the desired setting, then press **ENTER**.
  - For a description of each setting, see "Functions which can be set" (Page 35).

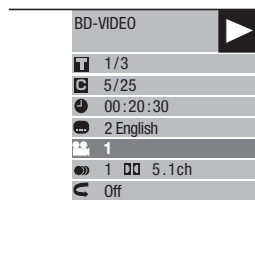

- 3 Press **↑/↓/←/→** to set, then press **ENTER**.
  - Operations vary depending on the setting. Follow the operation instructions on the screen.
- 4 Press **↵RETURN** or **FUNCTION** to close the Function Control screen.

### NOTE

- If "–" is displayed for an option like title number or subtitles, the disc has no titles or subtitles which can be selected.
- The displayed items vary depending on the disc.
- If you access the Function Control screen, it may be impossible to operate the BD/DVD video playback. In cases like this, close the Function Control screen.

Functions which can be set

Title/Track Number (Direct Title/Track Skip)

- Shows the title number being played back (or track number when playing back an audio CD). You can skip to the start of the title (or track).
- To skip to the start of a selected title (or track), press the number buttons (0 to 9) to enter the title (or track) number when this option is highlighted.

Chapter Number (Direct Chapter Skip)

- Shows the chapter number being played back. You can skip to the start of the chapter.
- To skip to the start of a selected chapter, press the number buttons (0 to 9) to enter the chapter number when this option is highlighted.

Playback Elapsed Time (Direct Time Skip)

- Shows the time elapsed from the beginning of the current disc title (or track). This lets you skip to a specific time.
- Press  $\leftarrow/\rightarrow$  to select the Hour, Minute or Second, then press  $\uparrow/\downarrow$  or the number buttons (0 to 9) to set the time. Press **ENTER** to start playback at the set time.

NOTE

- **ENTER** button: Enters the input number.
- **CLEAR** button: Clears the input number.

Subtitle Language

- Shows the currently selected subtitle language. If subtitles are provided in other languages, you can switch to your preferred language.

Angle Number

- Shows the currently selected angle number. If the video is recorded with multiple angles, you can switch the angle.

Audio


- Shows the currently selected type of audio. You can select the desired type of audio.

Repeat

- The current Title (or Chapter) or partial segments can be repeatedly played back. Repeat Playback is also possible with the **REPEAT** button on the remote control.

NOTE

- These functions may not work with all discs.

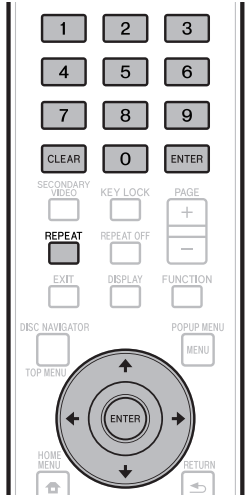


# SETTINGS

## Common operations

The "Menu" enables various audio/visual settings and adjustments on the functions using the remote control unit. You need to call up the OSD to perform settings for this player. The following is the explanation for the basic operations of the "Menu".

**Example:** Setting "Front Display/LED"

**1 Display the Menu screen**

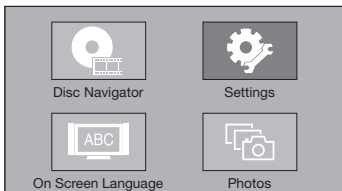

Press **HOME MENU** to display the Home Menu screen.  
Press **↑/↓/←/→** to select "Settings", then press **ENTER**.

**2 Select a menu item**

Press **↑/↓** to select "Front Display/LED", then press **ENTER**.


Audio Video Settings
Quick Start
Auto Power Off
KURO LINK
Playback Setting
Communication Setup
<b>Front Display/LED</b>
Version
USB Memory Management
Software Update
System Reset

**3 Select the next item**

Press **←/→** to select the desired item, then press **ENTER**.

On
Off

Press **↩ RETURN** to return to the previous "Menu" page.

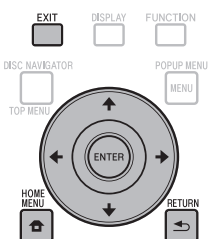

**4 Exit the Menu screen**

Press **HOME MENU** or **EXIT** to exit.

## Basic Operation for Playback Setting


**Example:** Setting "Parental Control" under "Playback Setting"

- 1** Press **HOME MENU** to display the Home Menu screen.
- 2** Press **↑/↓/←/→** to select "Settings", then press **ENTER**.
- 3** Press **↑/↓** to select "Playback Setting", then press **ENTER**.
- 4** Press **↑/↓** to select "Parental Control", then press **ENTER**.
  - When you operate this Player for the first time, the PIN code setting screen will be displayed. See "When setting the PIN code for the first time" below.
- 5** Press the number buttons (0 to 9) to enter your 4-digit PIN code.
  - You cannot move to the next setting screen until you can input the correct PIN code.



### When setting the PIN code for the first time

- 1** To set the PIN code for the first time, press **←/→** to select "Yes" to enter the PIN code setting menu, then press **ENTER**.
- 2** Press the number buttons (0 to 9) to enter a 4-digit number for the PIN code, then the same 4-digit number for confirmation.
- 3** Press **ENTER** to complete the PIN code setting procedure and move to the next setting screen.
- 6** Press **←/→** to select the parental control level for DVD VIDEO, BD-ROM, and then select the country code. Press **ENTER** after making each selection.

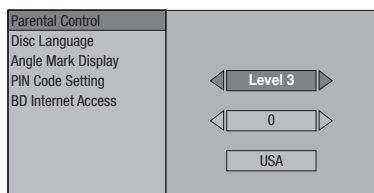

- 7** Press **HOME MENU** or **EXIT** to exit.

SETTINGS

Audio Video Settings

NOTE

- Characters in **bold** type are the default settings at time of purchase.

TV Aspect Ratio

You can set the screen aspect ratio of the connected TV, and adjust the video output.  
If you switch your TV (i.e. because you have bought a new one) and the screen aspect ratio of the connected TV changes, you will have to change the "TV Aspect Ratio" setting.

Item

Wide 16:9 :Select this when connecting to a TV with a 16:9 screen aspect ratio.  
Normal 4:3 :Select this when connecting to a TV with a 4:3 screen aspect ratio.

<When selecting Normal 4:3>

Item

Letter Box :If you connect to a TV with a screen aspect ratio of 4:3 and playback a DVD with 16:9 video, the video will be played back with black bands at the top and bottom while maintaining the 16:9 ratio.  
Pan Scan :If you connect to a TV with a screen aspect ratio of 4:3 and playback a DVD with 16:9 video, the video will be played back with the left and right sides of the image cut off to display in 4:3 screen aspect ratio. (This function works if the disc is labelled for 4:3PS.)

Component Video Out

This sets the resolution of the component video output.  
Some TV are not fully compatible with the Blu-ray disc player, which may cause the image distortion. In this case, press **VIDEO OUTPUT RESET** on the remote control for five seconds. "Component Video Out" will be reset to "576/480i" (factory preset value).

Item

1080i, 720p, 576/480p, **576/480i**

HDMI Video Out

This sets the resolution of the HDMI video output.  
Some TV are not fully compatible with the Blu-ray disc player, which may cause the image distortion. In this case, press **VIDEO OUTPUT RESET** on the remote control for five seconds. "HDMI Video Out" will be reset to "Auto" (factory preset value).

Item

**Auto**, 1080p, 1080i, 720p, 576/480p

NOTE

- When the BD player is connected to a 1080p 24 Hz compatible TV and the "HDMI Video Out" is set to "Auto", 1080p 24 Hz will automatically be displayed when compatible discs are played back.  
At 1080p 24 Hz/1080p 50 Hz/1080p 60 Hz, there is no output from the COMPONENT VIDEO OUTPUT jacks and VIDEO OUTPUT jack.

Video Out Select

Dual video output is possible simultaneously from the COMPONENT VIDEO OUTPUT jacks and the HDMI OUT terminal with the following settings. Select the video output which you want to have priority according to the following chart.

NOTE

- 1080p and KURO LINK are only available in HDMI.

Video Out Select	Dual Output	HDMI Video Out	Component Out Resolution in Dual Mode
HDMI	Yes*1	Auto	*1
	No	1080p	No
	Yes	1080i	1080i
	Yes	720p	720p
	Yes	576/480p	576/480p
*1 Depends on TV specifications and source signal. 1080p is not supported.			
Component	Dual Output	Component Video Out	HDMI Out Resolution in Dual Mode
	Yes	1080i	1080i
	Yes	720p	720p
	Yes	576/480p	576/480p
	Yes	576/480i	576/480i

Item

HDMI, Component

- When the priority video output is selected, video is output from the other video terminal with the resolution of the selected video output.
- There is no output from the COMPONENT VIDEO OUTPUT jacks and VIDEO OUTPUT jack when video is output at 1080p resolution and the priority video output is selected to "HDMI".
- If the video equipment connected to each of the terminals is not compatible with the resolution of the priority video output, abnormalities in images on the screen may appear.

Secondary Audio

This toggles the clicking sound on the menu and audio with secondary video in picture in picture mode for BD-Video.

- **Select "Off" when enjoying the high quality sounds of BD-Video.** (Bitstream can be selected with HDMI output.)

Item

On\*1, Off

\*1 When set to "On"  
• Audio in 6.1ch or greater format will be output as 5.1ch audio.  
• "HDMI Output" is set on "PCM".

# SETTINGS

## Audio Out

You can set the audio output when connecting to SURROUND equipment.

- 1** This sets the audio output connected to SURROUND equipment.

### Item

- HDMI Output:** Select this when you connect using HDMI OUT terminal.
- Digital Output:** Select this when you connect using DIGITAL OUT OPTICAL terminal.
- 2ch Audio Output:** Select this when you do not use SURROUND sound equipment.

- 2** You can set the audio output mode for each output terminal.

- ①** This sets the audio output mode for HDMI OUT terminal when selecting "HDMI Output".

### NOTE

- When the secondary audio is set to "On", PCM is automatically selected as the audio output mode.

### Item

- Bitstream:**
- Select this when connecting to HDMI equipment with a built-in decoder for DOLBY DIGITAL, etc.
  - Setting to Bitstream will output each audio signal by Bitstream.
- PCM (Surround):**
- Select this when connecting to multi-channel HDMI equipment.
  - Setting to PCM (Surround) will output by LINEAR PCM by decoding audio signals recorded in each audio output mode such as DOLBY DIGITAL, DTS.

- ②** This sets the audio output mode for DIGITAL OUT OPTICAL terminal when selecting "Digital Output".

### Item

- Bitstream:**
- Select this when connecting to SURROUND equipment with a built-in decoder for DOLBY DIGITAL, etc.
  - Setting to Bitstream will output each audio signal by Bitstream.
- PCM:**
- Select this when connecting to 2 channel stereo audio equipment.
  - Setting to PCM will output by converting each audio signal into PCM 2 channel audio signal.

### NOTE

- See page 45 for information on output of next generation audio formats.
- MPEG Audio is only output as PCM (Stereo) 48 kHz.

## Dynamic Range Control

This lets you adjust the range between the loudest and softest sounds (dynamic range) for playback at average volume. Use this when it is hard to hear dialog.

### Item

- Normal:** The same audio output range is played as the original recorded audio output range.
- Shift\*:** When Dolby Digital audio is played back, the dynamic range of the audio is adjusted so that the dialog portion can be heard easily. (If the audio sounds abnormal, set to "Normal".)
- Auto:** When you play back audio in the Dolby TrueHD format, the dynamic range is automatically adjusted.

\* Lower the audio volume before setting. If you do not do so, the speakers may emit a loud sound or excessive output may be applied to the speakers.

## Quick Start

This turns the Quick Start function on and off.

When the Quick Start function is on:

- The startup time of the Player is reduced.
- However, power consumption will increase to about 11 W.

When the Quick Start function is off:

- The player will enter the low power consumption mode when in standby condition.

### Item

Yes, No

### NOTE

- When "Quick Start" is set to "Yes", the Player requires some time to turn off.

## Auto Power Off

This sets the Player so that power is automatically shut off if playback is stopped for about 10 minutes.

### Item

Yes, No

## KURO LINK

This sets the Player to be controlled from the Flat Screen TV via the HDMI cable.

### Item

Yes, No

### NOTE

- For details, refer to "About KURO LINK function" on page 23.
- If "Component" is selected from the "Video Out Select" menu, KURO LINK is not available. Select "HDMI" if you want to use KURO LINK features.



## Playback Setting

### Parental Control

This lets you set the Parental Control depending on the disc content. The available Parental Control Levels are shown below.

The 4-digit PIN code number needs to be entered before the Parental Control Levels and the Country Code are set. The Parental Control Levels and the Country Code cannot be set if a PIN code has not been created or the PIN code is not entered.

#### Item (For DVD-VIDEO)

**8 and Off:** All DVD-video can be played.  
**1-7:** Prohibits play of DVD-video with corresponding ratings recorded on them.

#### Item (For BD-ROM)

**No Limit:** All BD-video can be played.  
**0-99 year(s):** Prohibits play of BD-video with corresponding ratings recorded on them.

#### Item (Country code)

Sets the country code. Refer to the Country Code List (page 45) because the ratings differ according to the country.

#### NOTE

- Refer to "Basic Operation for Playback Setting" on page 36 for details.

## Disc Language (Disc Priority Language)

This lets you select the language for subtitles, audio and menus displayed on the screen.

#### Item (Subtitle)

Refer to the Language List. (Page 45)

#### Item (Audio)

Refer to the Language List. (Page 45)

#### Item (Menu)

Refer to the Language List and Language Code List. (Page 45)

## Angle Mark Display

This lets you turn the Angle Mark Display on or off when BD/DVD video recorded with multiple angles is played back. (The Angle Mark is displayed in the lower right screen.)

#### Item

Yes, No

## PIN Code Setting

This sets the PIN code for setting or changing the Parental Control Level.

#### Item

Yes: Enter the 4-digit number.  
 No

#### NOTE

- When you forget PIN code, you can reset the current PIN code using "System Reset" under "Settings". (See this page.)
- You can also set the new PIN code if desired.

## BD Internet Access

This allows you to set access restriction to BD-LIVE contents.

#### Item

**Permit:** Allow all BD-LIVE discs.  
**Limit:** Allow only discs with owner certification.  
**Prohibit:** Prohibit all BD-LIVE discs.

#### NOTE

- The available functions differ depending on the disc.
- Regarding playback method of BD-LIVE contents, etc., perform the operations in accordance with the instructions in the BD disc manual.
- To enjoy BD-LIVE functions, perform the broadband internet connection (page 18) and communication settings (pages 40-42).

## Front Display/LED

If you feel that the indicators on the Player are too bright when watching movies, you can turn them off except for the STANDBY/ON indicator.

#### Item

On, Off

## Version

When you select "Version", the system software version is displayed. Please refer to our website for information regarding software updates.

<http://www.pioneer.eu/>  
<http://www.pioneer.co.uk/>

## System Reset

You can reset all settings to the factory presets.

#### Item


Reset, Not Reset

## Communication Setup

This allows you to perform and/or change the communication setting. This setting is required to use BD-LIVE functions that connect to the internet.

### NOTE

- Make sure that the LAN cable is connected to this Player. (See page 18.)
- For manually performing the setting, the following information of the connected router or modem is required. Confirm the information prior to the setting.
  - IP address, netmask, gateway, DNS IP address
- Besides, if specifying a proxy server, the following information specified from your internet service provider is also required. Confirm the information prior to the setting.
  - IP address and port number of the proxy server

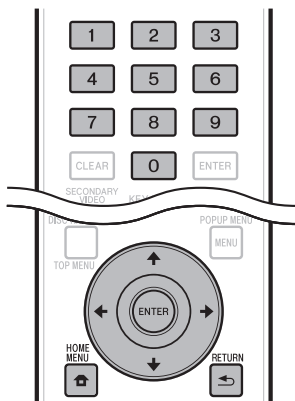

- 1 Press **HOME MENU** to display the Home Menu screen.
- 2 Press **↑/↓/←/→** to select "Settings", then press **ENTER**.
- 3 Press **↑/↓** to select "Communication Setup", then press **ENTER**.
- 4 Press **←/→** to select "Change", then press **ENTER**.

Setting the info. of the Ethernet  
 [Current Setup]  
 IP Address : Auto Setup  
 Netmask : Auto Setup  
 Gateway : Auto Setup  
 DNS : Auto Setup  
 Proxy : Not Use

Change
 Initialize

- For initializing the current setting, select "Initialize", then press **ENTER**.

- 5 For setting the IP address, press **←/→** to select "Yes" or "No", then press **ENTER**.

Do you obtain the IP address automatically?
 Yes No

IP Address
 Netmask
 Gateway

Next

- If selecting "Yes": The IP address is automatically obtained.
- If selecting "No": The IP address, netmask and gateway are manually entered using the screen for inputting characters. (See page 42.) Regarding each of the setup values, confirm the specifications of your broadband router.

- 6 Select "Next", then press **ENTER**.

- 7 For setting the DNS IP address, press **←/→** to select "Yes" or "No", then press **ENTER**.

Do you obtain the DNS IP address automatically?
 Yes No

Primary
 Secondary

Next

- If selecting "Yes": The DNS IP address is automatically obtained. (The DHCP server function of the router or modem is used for the automatic acquisition.)
- If selecting "No": The primary and secondary IP addresses are entered using the screen for inputting characters. (See page 42.) Regarding each of the setup values, confirm the specifications of your broadband router.

- 8 Select "Next", then press **ENTER**.

- 9 For setting the proxy server, press **←/→** to select "Yes" or "No", then press **ENTER**.

Do you use the proxy server?
 Yes No

Address
 Port

Next

- If selecting "Yes": The IP address or proxy server name and port number for the proxy server specified from your internet service provider are entered using the screen for inputting characters. (See page 42.)
- If selecting "No": Go to the next step.

# SETTINGS

- 10 Select “Next”, then press **ENTER**.
- 11 For the advanced setting (the setting of the Ethernet connection speeds), press **←/→** to select “Yes” or “No”, then press **ENTER**.
- Normally select “No”, then press **ENTER**.
  - The Ethernet connection speeds can be set when you select “Yes”, then press **ENTER**.
  - As automatic detection is made (factory preset mode), this setting is not normally necessary. If a situation occurs in which the Ethernet connection fails, etc., change the setting and confirm if the Ethernet connection successfully works.
- When the connection speed is set, select “Next”, then press **ENTER**.

Option  
Ethernet Connection Speeds

Yes

No

Auto-Detection

10M Half Duplex

100M Half Duplex

10M Full Duplex

100M Full Duplex

Next

- 12 For testing the connection to the internet, after confirming the settings, press **←/→** to select “Test”, then press **ENTER**.
- “Test” is available only when setting to obtain the IP address automatically. “Test” cannot be selected if the IP address has not been obtained automatically.

Confirm the current setting.

IP Address : xxx xxx xxx xxx  
Netmask : xxx xxx xxx xxx  
Gateway : xxx xxx xxx xxx  
DNS Address : xxx xxx xxx xxx  
MAC Address : xx:xx:xx:xx:xx:xx

Test

Complete

- As a result of the test, if the internet connection fails, enter the setup values manually.
- 13 Press **←/→** to select “Complete”, then press **ENTER**.

The operation procedure for inputting characters manually

NOTE

- Numeric characters such as IP address can be entered on the input screen using the number buttons (0 to 9) or **↔** and **ENTER** on the remote control.

IP Address	123	.		.		.	
Netmask		.		.		.	
Gateway		.		.		.	

- 1 Press **ENTER** at the boxes in which characters are to be entered, and the input screen will appear.

- 2 Press **↑/↓** to select the desired input mode.

- 3 Press the number buttons (0 to 9) or **↔** to select a number/character, then press **ENTER**.
- 4 Repeat the step 3 to display all of the desired characters/numbers in the input field.

Example: The screen for inputting numeric characters

NOTE

- Press **↵ RETURN** (Del.Char.) to delete a number/character you have input.
- To change a number/character you have input, press **GREEN** (Left) or **YELLOW** (Right) to select the number/character you want to change, and press **↵ RETURN** (Del.Char.). Then, press **↔** to select a new number/character you want to input, and press **ENTER**.

- 5 Press **BLUE** (Complete) to fix the numbers which have been input.

IP Address	123	.		.		.	
Netmask		.		.		.	
Gateway		.		.		.	


- 6 Repeat step 1 to 5 to finish inputting all the required characters.

Input character list

Numeric	<table><tr><td></td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>0</td><td></td><td></td><td></td><td></td></tr></table>															1	2	3	4	5	6	7	8	9	0				
	1	2	3	4	5	6	7	8	9	0																			
Edit	<table><tr><td>Cancel</td><td>Left</td><td>Right</td><td>Complete</td><td>Del.Char.</td></tr></table> <p>* The same operation as the <b>RED, GREEN, YELLOW, BLUE</b> buttons and <b>↵ RETURN</b> can be performed by selecting each of the items and pressing <b>ENTER</b>. “Del.Char.” stands for deleting characters.</p>														Cancel	Left	Right	Complete	Del.Char.										
Cancel	Left	Right	Complete	Del.Char.																									

## USB Memory Management

The following instructions explain how to delete data downloaded from BD-LIVE and recorded on the USB memory device.

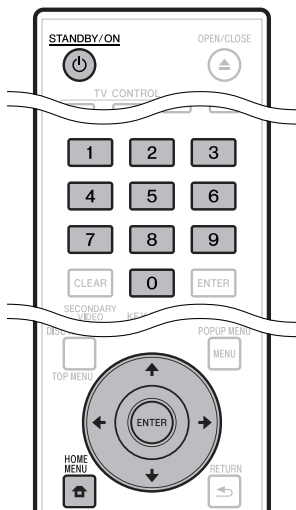

### Before using the USB memory device

#### CAUTION:

- Do not remove the USB memory device or unplug the AC cord while the operations for "USB Memory Management" or "Software Update" are being performed.
- Do not use a USB extension cable when connecting a USB memory device to the BD STORAGE/SERVICE terminal of the player.
  - Using a USB extension cable may prevent the player from performing correctly.


#### NOTE:

- Operation of USB memory devices is not guaranteed.

- 1 Insert the USB memory device into the BD STORAGE/SERVICE terminal on rear of this player.
- 2 Press **HOME MENU** to display the Home Menu screen.
- 3 Press **↑/↓/←/→** to select "Settings", then press **ENTER**.
- 4 Press **↑/↓** to select "USB Memory Management", then press **ENTER**.
  - "No USB Memory" appears when no USB memory is inserted.
- 5 Press **↑/↓**, select "Erase" or "Format", then press **ENTER**.

Erase: Deletes only BD-VIDEO data written on the USB memory device such as BD-LIVE data.


Format: Be aware that all data including BD-VIDEO data will be deleted.

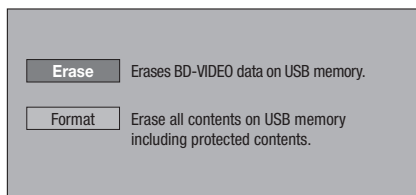

#### NOTE


- Data which has been saved to the player's internal memory (game score, etc.) will also be deleted.

 - 6 Press **←/→**, select "Yes", and press **ENTER**.



- 7 Start the process.

- The screen for the current operation will display.

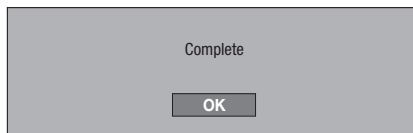

- 8 Press **ENTER**.

## Software Update


This function allows software updates by inserting a USB memory device with the update file into the BD STORAGE/SERVICE terminal on this player. (To update software, use a USB memory device complying with USB specification 2.0.)

**To check for the availability of a software update, visit <http://www.pioneer.eu/> or <http://www.pioneer.co.uk/>.**


- 1 Insert the USB memory device with the update file into the BD STORAGE/SERVICE terminal on rear of this player.
- 2 Press **HOME MENU** to display the Home Menu screen.
- 3 Press **↑/↓/←/→** to select “Settings”, then press **ENTER**.
- 4 Press **↑/↓** to select “Software Update”, then **ENTER**.
  - If you have not yet set the PIN code, go to step 6.
- 5 Enter the 4-digit number using 0-9.



- 6 Press **ENTER** to start checking data in the USB memory device.

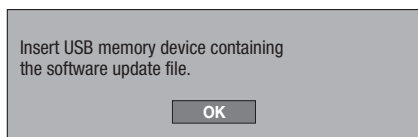



- The screen message appears during data checking.
- The current version of this unit software and the version of the update file on the USB memory device are displayed. To update this player software with update file, select “Yes”, and press **ENTER**.

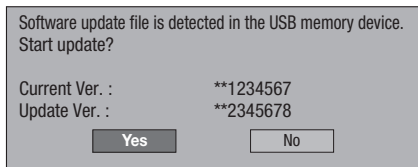

- If the USB memory device is not properly installed or the correct update file cannot be found on the USB memory device, an error message is displayed. Check the file on the USB memory device, and then reinsert the USB memory device correctly.



- 7 Press **ENTER** to start updating.
  - The screen becomes dark for a while until the update screen can be displayed. Please wait for the update screen to appear. Do not unplug the AC cord.

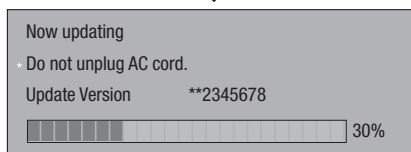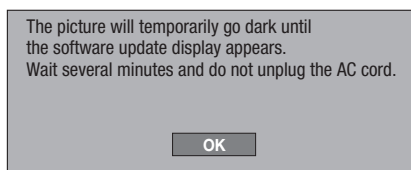

- 8 When the software is successfully updated, a screen is displayed indicating that the update process is completed.
  - If the update has failed, check the file in the USB device and try Software Update again.
- 9 Press **⏻** **STANDBY/ON** to turn off the player.
- 10 Remove the USB memory device.

### NOTE

- When updating software, remove any disc loaded in the disc tray.
- The USB memory device used for updating the software should contain no files other than those necessary for the software update.
- The USB memory device should contain only a single version (the most recent) of the update software.

SETTINGS

Country Code List

USA / CANADA / JAPAN / GERMANY / FRANCE / UK / ITALY / SPAIN / SWISS / SWEDEN / HOLLAND / NORWAY / DENMARK / FINLAND / BELGIUM / HONG KONG / SINGAPORE / THAILAND / MALAYSIA / INDONESIA / TAIWAN / PHILIPPINE / AUSTRALIA / RUSSIA / CHINA

Language List

English / Français / Deutsch / Italiano / Español / Japanese / Svenska / Nederlands

Language Code List

**AA** Afar / **AB** Abkhazian / **AF** Afrikaans / **AM** Ameharic / **AR** Arabic / **AS** Assamese / **AY** Aymara / **AZ** Azerbaijani / **BA** Bashkir / **BE** Byelorussian / **BG** Bulgarian / **BH** Bihari / **BI** Bislama / **BN** Bengali, Bangla / **BO** Tibetan / **BR** Breton / **CA** Catalan / **CO** Corsican / **CS** Czech / **CY** Welsh / **DA** Danish / **DE** German / **DZ** Bhutani / **EL** Greek / **EN** English / **EO** Esperanto / **ES** Spanish / **ET** Estonian / **EU** Basque / **FA** Persian / **FI** Finnish / **FJ** Fiji / **FO** Faroese / **FR** French / **FY** Frisian / **GA** Irish / **GD** Scots Gaelic / **GL** Galician / **GN** Guarani / **GU** Gujarati / **HA** Hausa / **HI** Hindi / **HR** Croatian / **HU** Hungarian / **HY** Armenian / **IA** Interlingua / **IE** Interlingue / **IK** Inupiak / **IN** Indonesian / **IS** Icelandic / **IT** Italian / **IW** Hebrew / **JA** Japanese / **JI** Yiddish / **JW** Javanese / **KA** Georgian / **KK** Kazakh / **KL** Greenlandic / **KM** Cambodian / **KN** Kannada / **KO** Korean / **KS** Kashmiri / **KU** Kurdish / **KY** Kirghiz / **LA** Latin / **LN** Lingala / **LO** Laothian / **LT** Lithuanian / **LV** Latvian, Lettish / **MG** Malagasy / **MI** Maori / **MK** Macedonian / **ML** Malayalam / **MN** Mongolian / **MO** Moldavian / **MR** Marathi / **MS** Malay / **MT** Maltese / **MY** Burmese / **NA** Nauru / **NE** Nepali / **NL** Dutch / **NO** Norwegian / **OC** Occitan / **OM** Afan (Oromo) / **OR** Oriya / **PA** Panjabi / **PL** Polish / **PS** Pashto, Pushto / **PT** Portuguese / **QU** Quechua / **RM** Rhaeto-Romance / **RN** Kirundi / **RO** Romanian / **RU** Russian / **RW** Kinyarwanda / **SA** Sanskrit / **SD** Sindhi / **SG** Sangho / **SH** Serbo-Croatian / **SI** Singhalese / **SK** Slovak / **SL** Slovenian / **SM** Samoan / **SN** Shona / **SO** Somali / **SQ** Albanian / **SR** Serbian / **SS** Siswat / **ST** Sesotho / **SU** Sundanese / **SV** Swedish / **SW** Swahili / **TA** Tamil / **TE** Telugu / **TG** Tajik / **TH** Thai / **TI** Tigrinya / **TK** Turkmen / **TL** Tagalog / **TN** Setswana / **TO** Tonga / **TR** Turkish / **TS** Tsonga / **TT** Tatar / **TW** Twi / **UK** Ukrainian / **UR** Urdu / **UZ** Uzbek / **VI** Vietnamese / **VO** Volapük / **WO** Wolof / **XH** Xhosa / **YO** Yoruba / **ZH** Chinese / **ZU** Zulu

About Output of Next Generation Audio Formats

Next generation audio formats	Maximum number of channels	HDMI		DIGITAL OUT	
		PCM	Bitstream	PCM	Bitstream
Dolby TrueHD	7.1ch (48 kHz/96 kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
	5.1ch (192 kHz)	5.1ch *3	5.1ch *4	2ch *2	5.1ch *1/*3
Dolby Digital PLUS	7.1ch (48 kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
DTS-HD Master Audio	7.1ch (48 kHz/96 kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
	5.1ch (192 kHz)	5.1ch *3/*5	5.1ch *4	2ch *2	5.1ch *1/*3
DTS-HD High Resolution Audio	7.1ch (48 kHz/96 kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
LPCM	7.1ch (48 kHz/96 kHz)	7.1ch *3	—	2ch *2	—
	5.1ch (192 kHz)	5.1ch *3	—	2ch *2	—

\*1 Core only  
\*2 Down mixed  
\*3 When "Secondary Audio" is set to "On", the audio is output as 48 kHz.  
\*4 When "Secondary Audio" is set to "On", the audio is output as PCM.  
\*5 When 5.1ch (192 kHz), the audio output is downsampled to 96 kHz.  
When 2ch, the audio is output as 192 kHz.

# Troubleshooting

The following problems do not always suggest a defect or malfunction of this Player. Refer to the problems and lists of possible solutions below before calling for service.

## Power

Problem	Possible causes and solutions
The Player power cannot be turned on.	<ul style="list-style-type: none"> <li>Is the power cord firmly plugged into the AC outlet? (Page 19)</li> <li>When the power cord is plugged into an AC outlet, press and hold <b>STANDBY/ON</b> on the Player until "<b>RESET</b>" appears on the front panel display. Then, after the STANDBY/ON indicator is lit, turn on the power. (Page 48)</li> <li>Press <b>STANDBY/ON</b> after the STANDBY/ON indicator turns on. (Page 20)</li> </ul>
The Player power is turned on automatically.	<ul style="list-style-type: none"> <li>When "Settings" – "KURO LINK" is set to "Yes" on the player, the player's power may turn on when the connected TV is operated. (Page 38)</li> </ul>
The Player power is turned off automatically.	<ul style="list-style-type: none"> <li>Is "Auto Power Off" set to "Yes"? When "Auto Power Off" is set to "Yes", the power will be automatically turned off after 10 continuous minutes of inactivity (no playback). (Page 38)</li> <li>When "Settings" – "KURO LINK" is set to "Yes" on the player, the player's power may turn off when the power of the connected TV is turned off. (Page 38)</li> </ul>

## Basic Operation

Problem	Possible causes and solutions
The remote control does not work.	<ul style="list-style-type: none"> <li>Use the remote control within its operating range. (Page 19)</li> <li>Replace the batteries. (Page 19)</li> </ul>
Cannot operate the Player.	<ul style="list-style-type: none"> <li>Are you operating the Player within the specified operating temperature range? (Page 52)</li> </ul>

## Disc Playback

Problem	Possible causes and solutions
The Player cannot play a disc.	<ul style="list-style-type: none"> <li>Take out the disc and clean it. (Page 9)</li> <li>Make sure that the disc is loaded properly (aligned in disc tray and label-side up). (Page 24)</li> <li>Make sure that region code on the disc matches that of this Player. (Page 6)</li> <li>Allow any condensation in or near the Player to dry. (Page 9)</li> <li>Check that the disc is recorded in the compatible TV system (PAL or NTSC).</li> <li>The Player cannot play back video which was not recorded normally. (Page 6)</li> <li>Proper playback may be impossible due to the state of the disc recording, a scratched, warped or dirty disc, the state of the pick-up, or compatibility issues between this Player and the disc being used. (Pages 6, 9)</li> <li>When the recorded time of a disc is unusually short, playback may not be possible.</li> <li>BD-RE/-R discs recorded in a format other than BDMV/AVCHD cannot be played back. (Page 6)</li> </ul>
The disc is automatically ejected after closing the disc tray.	<ul style="list-style-type: none"> <li>Make sure that the disc is loaded properly (aligned in disc tray and label-side up). (Page 24)</li> <li>Take out the disc and clean it. (Page 9)</li> <li>Make sure that region code on the disc matches that of this Player. (Page 6)</li> <li>Make sure that the disc is playable. (Page 6)</li> </ul>
Video stops.	<ul style="list-style-type: none"> <li>Has the Player been subjected to shock or impact? Are you using it in an unstable location? The Player will stop if it senses shock or vibration.</li> </ul>
The Player makes a snapping sound when starting playback or loading a disc.	<ul style="list-style-type: none"> <li>The player may sometimes make a snapping sound when starting playback if it has not been operated in a while. These sounds are not malfunctions of the player but are normal operating conditions.</li> </ul>



## Picture

Problem	Possible causes and solutions
No picture.	<ul style="list-style-type: none"> <li>• Make sure that the cables are connected correctly. (Pages 14–16)</li> <li>• Make sure that the connected TV or the AV receiver is set to the correct input. (Pages 14–16)</li> <li>• Take out the disc and clean it. (Page 9)</li> <li>• Make sure that region code on the disc matches that of this Player. (Page 6)</li> <li>• There is no picture from the HDMI output. <ul style="list-style-type: none"> <li>– Are the settings performed correctly? Please check the settings. (Page 37)</li> </ul> </li> <li>• There is no picture from the component video output. <ul style="list-style-type: none"> <li>– Are the settings performed correctly? Please check the settings. (Page 37)</li> </ul> </li> </ul>
Screen freezes and operation buttons do not work.	<ul style="list-style-type: none"> <li>• Press <b>■ STOP</b>, then restart playback.</li> <li>• Turn off the power and turn on the power again.</li> <li>• If the power is not turned off, perform a reset. (Page 48)</li> <li>• Is the disc damaged or dirty? Check the condition of the disc. (Page 9)</li> </ul>
There is just audio with no video.	<ul style="list-style-type: none"> <li>• Is the connection cable for video output connected properly? (Pages 14–16)</li> </ul>
Widescreen video appears vertically stretched, or black bands appear at the top and bottom of the screen.	<ul style="list-style-type: none"> <li>• Is "TV Aspect Ratio" set to match the connected TV? (Page 37)</li> <li>• If you are using a widescreen TV, is the "TV Aspect Ratio" set to "Wide"? (Page 37)</li> </ul>
Square noise (mosaic) appears on the screen.	<ul style="list-style-type: none"> <li>• Blocks in images may be visible in scenes with rapid movement due to the characteristics of digital image compression technology.</li> </ul>
The playback screen will be disturbed if DVD video is recorded to a VCR, or played back through a VCR.	<ul style="list-style-type: none"> <li>• This Player complies with analog copy protection. Some discs contain a copy prohibiting signal. If you try to play back such discs through a VCR, or record to a VCR and play back the signal, the copy protection will prevent normal playback. (Pages 15–16)</li> </ul>
Audio is not output, or images are not played back properly.	<ul style="list-style-type: none"> <li>• The audio may not be output or the images may not be played back properly for some discs in which copyright-protected contents are recorded.</li> </ul>

## Sound

Problem	Possible causes and solutions
No sound, or sound is distorted.	<ul style="list-style-type: none"> <li>• If the volume of the TV or amplifier is set to minimum, turn the volume up.</li> <li>• There is no sound during still mode, slow motion playback, fast forward and fast reverse. (Page 30)</li> <li>• DVD audio recorded in DTS is only output from the DIGITAL OUT OPTICAL terminal. Connect a DTS compatible digital amplifier or decoder to the DIGITAL OUT OPTICAL terminal on this Player. (Page 17)</li> <li>• Check that the audio cable is connected correctly. (Page 17)</li> <li>• Check that the cable plugs are clean.</li> <li>• Take out the disc and clean it. (Page 9)</li> <li>• Audio may not be output depending on the audio recording status, such as when audio other than an audio signal or non-standard audio is recorded for the audio content of the disc. (Page 6)</li> </ul>
Left and right channels of audio are reversed, or sound comes out of only one side.	<ul style="list-style-type: none"> <li>• Are left and right audio cables connected to the opposite terminal, or is one side disconnected? (Page 17)</li> </ul>
Audio is not output, or images are not played back properly.	<ul style="list-style-type: none"> <li>• The audio may not be output or the images may not be played back properly for some discs in which copyright-protected contents are recorded.</li> </ul>

## Network

Problem	Possible causes and solutions
Cannot connect to the Internet.	<ul style="list-style-type: none"> <li>• Is the LAN cable connected properly?</li> <li>• Is the wrong cable such as a modular cable used? Connect a LAN cable to the LAN terminal. (Page 18)</li> <li>• Is the power for the connected equipment, such as broadband router or modem turned on?</li> <li>• Is the broadband router and/or modem properly connected?</li> <li>• Is the proper value(s) set in the network setting? Check "Communication Setup". (Pages 40–42)</li> </ul>

## Troubleshooting

### Network (Continued)

Problem	Possible causes and solutions
Cannot download BD-LIVE contents.	<ul style="list-style-type: none"><li>• Is the LAN cable connected properly? (Page 18)</li><li>• Is the USB memory device properly connected? Check that the USB memory device is connected to the BD STORAGE/SERVICE terminal of this Player. (Page 18)</li><li>• Check if the BD disc supports BD-LIVE.</li><li>• Check the setting for "BD Internet Access". (Page 39)</li></ul>

### KURO LINK

Problem	Possible causes and solutions
KURO LINK function does not work.	<ul style="list-style-type: none"><li>• Connect the HDMI cable properly. (Page 14)</li><li>• Use High Speed HDMI™ cables when using the KURO LINK function. The KURO LINK function may not operate properly if other HDMI cables are used.</li><li>• Set "Settings" – "KURO LINK" on the player to "Yes". (Page 38)</li><li>• The KURO LINK function does not work with devices of other brands, even if connected using an HDMI cable. The KURO LINK function will not work if devices that do not support the KURO LINK function or devices of other brands are connected between the KURO LINK-compatible device and the player. It may also not work with certain Flat Screen TVs.</li><li>• Set KURO LINK to On on the connected device. The KURO LINK function works when KURO LINK is set to On for all devices connected by HDMI cable. Once connections and the settings of all the devices are finished, be sure to check that the player's picture is output to the Flat Screen TV. (Also check after changing the connected devices and reconnecting HDMI cables.) The KURO LINK function may not operate properly if the player's picture is not properly output to the Flat Screen TV.</li><li>• The KURO LINK function may not work if three or more players, including this player, are connected.</li><li>• Also refer to the operating instructions of the connected device.</li></ul>
KURO LINK indicator does not light.	<ul style="list-style-type: none"><li>• Connect to a KURO LINK-compatible Pioneer Flat Screen TV using an HDMI cable.</li><li>• Set KURO LINK to On on the Flat Screen TV.</li><li>• Set "Settings" – "KURO LINK" on the player to "Yes". (Page 38)</li><li>• Check that the player's picture is being output to the Flat Screen TV.</li></ul>

### Other

Problem	Possible causes and solutions
The TV operates incorrectly.	<ul style="list-style-type: none"><li>• Some TVs with wireless remote control capability may operate incorrectly when using the remote control of this Player. Use such TVs away from this Player.</li></ul>
The Player heats up during use.	<ul style="list-style-type: none"><li>• When using this Player, the console cabinet may heat up depending on the usage environment. This is not a malfunction.</li></ul>
Input of connected TV, AV system and HD AV Converter switches automatically.	<ul style="list-style-type: none"><li>• When "Settings" – "KURO LINK" is set to "Yes" on the player, the input on the connected TV, AV system (AV receiver or amplifier, etc.) and HD AV Converter may switch automatically. (Page 38)</li></ul>
STANDBY/ON indicator will remain lit.	<ul style="list-style-type: none"><li>• When the AC cord is removed from the outlet, the STANDBY/ON indicator will remain lit for a short period. This is normal and is not a malfunction.</li></ul>
The display panel shows "Hold", and operations are disabled.	<ul style="list-style-type: none"><li>• KEY LOCK is in effect. Depress the remote control unit's KEY LOCK button for five seconds or more to cancel the KEY LOCK function.</li></ul>

### To Reset this Player

- If this Player receives strong interference from a source such as excessive static electricity, strong external noise, malfunction of power supply, or voltage caused by lightning during use or a wrong operation is sent to the Player, errors like the Player not accepting an operation may occur. Press and hold **STANDBY/ON** on the Player until "RESET" appears on the front panel display when the Player does not operate properly even after the power has been turned off. Then, after the STANDBY/ON indicator is lit, turn on the power.
- When a reset is performed while the power is on, the Player will turn off. Turn the power on again. At this point, it may take a few moments for the system processing to finish before the Player is ready for use. During the system processing, the BD/DVD/CD disc indicator on the front panel display of the Player will blink. Once the system processing has finished, the indicators will finish blinking and then light up normally. You can operate the Player when the BD/DVD/CD disc indicator is lit.
- Since all settings including the language setting stored in memory are also reset when a reset has been performed, they must be set again.
- When the problem persists even after performing a reset, unplug the AC cord and plug it in again. If this does not solve the problem, contact the nearest service center approved by Pioneer.

# On-screen Error Messages

## Messages Relating to BD disc and DVD disc

- The following messages appear on the TV screen in case the disc you tried to playback is not appropriate or the operation is not correct.

Error message	Possible Error	Suggested Solution
Cannot play.	<ul style="list-style-type: none"><li>• The disc cannot be played back with this Player.</li></ul>	<ul style="list-style-type: none"><li>• Check the disc, and load it correctly.</li></ul>
Incompatible disc.	<ul style="list-style-type: none"><li>• If you load a disc which cannot be played with this Player (i.e. a scratched disc), or if you load a disc upside down, this message will appear, and the disc tray will automatically pop out.</li></ul>	
	<ul style="list-style-type: none"><li>• Occurs if the loaded disc cannot be played because it is a non-standard disc or scratched, etc.</li></ul>	<ul style="list-style-type: none"><li>• Remove the disc.</li></ul>
Cannot operate.	<ul style="list-style-type: none"><li>• Occurs if an operation is incorrect.</li></ul>	_____
This USB memory is not formatted properly. Please format the memory in USB memory management.	<ul style="list-style-type: none"><li>• Occurs if there is a formatting error.</li></ul>	<ul style="list-style-type: none"><li>• Format the USB memory again.</li></ul>
The Connected USB Memory cannot be used. It should be compliant with USB 2.0.	<ul style="list-style-type: none"><li>• Occurs if USB memory not compliant with USB 2.0 High Speed (480Mbit/s) is used (i.e. USB 1.0/USB 1.1).</li></ul>	<ul style="list-style-type: none"><li>• Connect USB 2.0 High Speed (480Mbit/s) compliant USB memory.</li></ul>

# Glossary

---

## AVCHD (Advanced Video Codec High Definition)

The AVCHD is a high definition (HD) digital video camera recorder format recording high-definition onto certain media by using highly efficient codec technologies.

## BD-DAV (Page 6)

BD-DAV (Blu-ray Disc Audio/Visual, BD-AV) refers to one of the application formats used for writable Blu-ray discs such as BD-R, BD-RE, etc. BD-DAV is a recording format equivalent to DVD-VR (VR mode) of the DVD specifications.

## BD-J application

The BD-ROM format supports Java for interactive functions. "BD-J" offers content providers almost unlimited functionality when creating interactive BD-ROM titles.

## BD-LIVE (page 26)

A variety of interactive content is available from BD-LIVE compatible Blu-ray discs via the internet.

## BDMV (page 6)

BDMV (Blu-ray Disc Movie, BD-MV) refers to one of the application formats used for BD-ROM which is one of the Blu-ray Disc specifications. BDMV is a recording format equivalent to DVD-video of the DVD specification.

## BD-R (pages 6, 24)

A BD-R (Blu-ray Disc Recordable) is a recordable, write-once Blu-ray Disc. Since contents can be recorded and cannot be overwritten, a BD-R can be used to archive data or for storing and distributing video material.

## BD-RE (pages 6, 24)

A BD-RE (Blu-ray Disc Rewritable) is a recordable and rewritable Blu-ray Disc.

## BD-ROM

BD-ROMs (Blu-ray Disc Read-Only Memory) are commercially produced discs. Other than conventional movie and video contents, these discs have enhanced features such as interactive content, menu operations using pop-up menus, selection of subtitle display, and slide shows. Although a BD-ROM may contain any form of data, most BD-ROM discs will contain movies in High Definition format for playback on Blu-ray Disc players.

## Blu-ray Disc (BD) (page 6)

A disc format developed for recording/playing high-definition (HD) video (for HDTV, etc.), and for storing large amounts of data. A single layer Blu-ray Disc holds up to 25 GB, and a dual-layer Blu-ray Disc holds up to 50 GB of data.

## Chapter number (pages 34, 35)

Sections of a movie or a music feature that are smaller than titles. A title is composed of several chapters. Some discs may only be comprised of a single chapter.

## Copy guard

This function prevents copying. You cannot copy discs marked by the copyright holder with a signal which prevents copying.

## Disc menu (page 25)

This lets you select things like the subtitle language or audio format using a menu stored on the DVD video disc.

## Dolby Digital

A sound system developed by Dolby Laboratories Inc. that gives movie theater ambience to audio output when the product is connected to a Dolby Digital processor or amplifier.

## Dolby Digital Plus

A sound system developed as an extension to Dolby Digital. This audio coding technology supports 7.1 multi-channel surround sound.

## Dolby TrueHD

Dolby TrueHD is a lossless coding technology that supports up to 8 channels of multi-channel surround sound for the next generation optical discs. The reproduced sound is true to the original source bit-for-bit.

## DTS

This is a digital sound system developed by DTS, Inc. for use in cinemas.

## DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is a new technology developed for the next generation high definition optical disc format.

## DTS-HD Master Audio

DTS-HD Master Audio is a lossless audio compression technology developed for the next generation high definition optical disc format.

## DTS-HD Master Audio | Essential

DTS-HD Master Audio | Essential is a lossless audio compression technology developed for the next generation high definition optical disc format.

## DVD upscaling (page 24)

Upscaling (upconverting) refers to a function of various players and devices that enlarge the image size to fit the size of the screen of video equipments such as a TV.

## DVD video (pages 6, 24)

A disc format that contains up to eight hours of moving pictures on a disc the same diameter as a CD. A single-layer single sided DVD holds up to 4.7 GB; a double layer single-sided DVD, 8.5 GB; a single layer double-sided DVD, 9.4 GB; double-layer double-sided DVD, 17 GB. The MPEG 2 format was adopted for efficient video data compression. It is a variable rate technology that encodes the data to according to the status of the video for reproducing high-quality images. Audio information is recorded in a multi-channel format such as Dolby Digital, allowing for a realistic audio presence.

## DVD+/-R (pages 6, 24)

A DVD+/-R is a recordable, write-once DVD. Since contents can be recorded and cannot be overwritten, a DVD+/-R can be used to archive data or for storing and distributing video material. The DVD+/-R has two different formats: VR format and Video format. DVDs created in Video format have the same format as a DVD video, while discs created in VR (Video Recording) format allow the contents to be programmed or edited.

## DVD+/-RW (pages 6, 24)

A DVD+/-RW is a recordable and rewritable DVD. The re-recordable feature makes editing possible. The DVD+/-RW has two different formats: VR format and Video format. DVDs created in Video format have the same format as a DVD video, while discs created in VR (Video Recording) format allow the contents to be programmed or edited.

### HDMI (page 14)

HDMI (High-Definition Multimedia Interface) is an interface that supports both video and audio on a single digital connection. The HDMI connection carries standard to high definition video signals and multi-channel audio signals to AV components such as HDMI equipped TVs, in digital form without degradation.

### Interlace format

Interlace format shows every other line of an image as a single "field" and is the standard method for displaying images on television. The even numbered field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

### JPEG (pages 6, 7, 33)

JPEG (Joint Photographic Experts Group) is a still image data compression format and is used in most of digital cameras.

### Letter Box (LB 4:3) (page 37)

A screen size with black bars on the top and bottom of the image to allow viewing of wide-screen (16:9) material on a connected 4:3 TV.

### Linear PCM Sound

Linear PCM is a signal recording format used for Audio CDs and on some DVD and Blu-ray discs. The sound on Audio CDs is recorded at 44.1 kHz with 16 bits. (Sound is recorded between 48 kHz with 16 bits and 96 kHz with 24 bits on DVD video discs and between 48 kHz with 16 bits and 192 kHz with 24 bits on BD video discs.)

### MPEG-2

MPEG-2 (Moving Picture Experts Group phase 2) is one of the video data compression schemes, which is adopted for DVD videos and digital broadcasts worldwide. Some Blu-ray Discs also use high bitrate MPEG-2.

### Multi Angle (pages 32, 34, 35)

This is a feature of DVD and BD video discs. In some discs, the same scene is shot from different angles, and these are stored in a single disc so you can enjoy playback from each angle. (This function can be enjoyed if the disc is recorded with multiple angles.)

### Multi Audio

This is a feature of DVD and BD video discs. This function makes it possible to record different audio tracks for the same video, so you can enhance your enjoyment by switching the audio. (You can enjoy this function with discs recorded with multiple audio tracks.)

### Pan Scan (PS 4:3) (page 37)

A screen size that cuts off the sides of the image to allow viewing of wide-screen (16:9) material on a connected 4:3 TV.

### Parental control (page 39)

In some digital broadcasts and BD/DVD video discs, a control level for disc viewing is set depending on the age of the viewer. With this Player, you can set the control level for viewing such broadcasts and discs.

### Pop-up menu (page 25)

An enhanced menu operation available on BD video discs. The pop-up menu appears when **POPUP MENU/MENU** is pressed during playback, and can be operated while playback is in progress.

### Progressive format

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 30 frames/60 fields in one second, the Progressive format can show 60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper.

### Region code (page 6)

Code identifying a geographic region of compatibility for a BD/DVD.

### Resume playback (pages 24, 29)

If you stop playback while it is in progress, the Player stores the stop position in memory, and this function lets you playback from that point.

### Skip (page 30)

This returns to the start of the chapter (or track) being played, or skips to the next chapter (or track).

### Subtitles (pages 31, 34, 35)

These are the lines of text appearing at the bottom of the screen which translate or transcribe the dialog. They are recorded on many DVD and BD video discs.

### Time number

This indicates the play time which has elapsed from the start of a disc or a title. It can be used to find a specific scene quickly. (It may not work with some discs.)

### Title number (pages 34, 35)

These numbers are recorded on DVD and Blu-ray discs. When a disc contains two or more movies, these movies are numbered as title 1, title 2, etc.

### Top menu (page 25)

In a BD/DVD video, this is the menu for selecting things like the chapter to be played back and the subtitle language. In some DVD videos, the top menu may be called the "Title Menu".

### Track number (pages 34, 35)

These numbers are assigned to the tracks which are recorded on audio CDs. They enable specific tracks to be located quickly.

### x.v.Color

x.v.Color reproduces a greater range of color than before, showing almost all of the colors that the human eye can detect. (Applicable for JPEG files only with this system)

# Specifications

## General

Power supply	AC 100–240 V, 50/60 Hz
Power consumption (Normal)	20 W Power is automatically shut off if playback is stopped for about 10 minutes. (When "Auto Power Off" is set to "Yes")
Power consumption (Standby)	0.6 W (When "Quick Start" is set to "No") 11 W (When "Quick Start" is set to "Yes")
Dimensions	420 mm × 58 mm × 268 mm (W × H × D)
Weight	2.7 kg
Operating temperature	5 °C to 35 °C
Storage temperature	–20 °C to 55 °C
Operating humidity	10 % to 80 % (no condensation)
TV systems	PAL system/NTSC system (The system recorded on the disc is output.)

## Playback

Playable discs	BD-ROM, BD-RE Dual Layer, BD-R Dual Layer, DVD Video, DVD+RW/+R/-RW/-R Dual Layer (Video/VR/AVCHD format), Audio CD (CD-DA), CD-RW/-R (CD-DA, JPEG file format)
Region code	B or ALL for BD, 2 or ALL for DVD

## Input/Output

HDMI OUT	HDMI 19-pin standard connector (1080 p 24 Hz output) HDMI™ (V.1.3 with Deep Color, x.v.Color™, Dolby TrueHD, DTS-HD Master Audio)
COMPONENT VIDEO OUTPUT	Output level: Y: 1 Vp-p (75 ohms) P <sub>B</sub> , P <sub>R</sub> : 0.7 Vp-p (75 ohms) Jacks: RCA jack
VIDEO OUTPUT	Output level: 1 Vp-p (75 ohms) Jack: RCA-pin jack
DIGITAL OUT OPTICAL	Terminal: Square Optical terminal
AUDIO OUTPUT	Output level: 2 V rms (Output impedance: 1 k ohms) Jacks: RCA jack
BD STORAGE/SERVICE	USB 2.0 High Speed (480 Mbit/s) correspondence (for Local storage/Software update)
LAN	10BASE-T/100BASE-TX

Specifications are subject to change without notice.

# Licenses

The licenses for the software used on this player are shown below.

## • OpenSSL

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit.

See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL, please contact [opensslcore@openssl.org](mailto:opensslcore@openssl.org).

### OpenSSL License

Copyright © 1998-2007 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. This product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)). This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

### Original SSLeay License

Copyright © 1995-1998 Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)). All rights reserved.

This package is an SSL implementation written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com))"

The word "cryptographic" can be left out if the routines from the library being used are not cryptographic related :-)

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgment: "This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com))"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The license and distribution terms for any publicly available version or derivative of this code cannot be changed, i.e. this code cannot simply be copied and put under another distribution license [including the GNU Public License.]

### • zlib

This software is based in part on zlib see <http://www.zlib.net> for information.

### • GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc.,  
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

#### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software - to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that we

is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations. Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary.

To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

#### TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law; that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote



it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)
- The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.
4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to

satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.
10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES

OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.>

Copyright © <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details. You should have received a copy of the GNU

General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright © year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items - whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a 'copyright disclaimer' for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc. hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker. ©signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

## • GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999  
Copyright © 1991, 1999 Free Software Foundation, Inc.  
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software - to make sure the software is free for all its users. This license, the Lesser General Public License, applies to some specially designated software packages - typically libraries - of the Free Software Foundation and other authors who decide to



use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below. When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it. For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights. We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into nonfree programs. When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library. We call this license the "Lesser" General Public License because it does less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library.

A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in nonfree programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that

program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

## TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables. The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- The modified work must itself be a software library.
- You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful. (For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in

themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License. However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the Library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms

permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it.

However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things: distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights

under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein.

You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library. If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software

generally.

## NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty, and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the library's name and a brief idea of what it does.>

Copyright © -year- <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details. You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoodyne, Inc., hereby disclaims all copyright interest in the library "Frob" (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990

Ty Coon, President of Vice

That's all there is to it!

## • [Notice on GNU General Public License]

This product includes the software licensed for use under the terms of a GNU General Public License. A copy of the corresponding source code can be obtained by being charged the fee for distribution. To obtain a copy, contact your local Pioneer Customer Support Center.

See the GNU website (<http://www.gnu.org>) for details of the GNU General Public License.

<http://www.pioneer.co.uk>  
<http://www.pioneer.eu>

Published by Pioneer Corporation.  
Copyright © 2009 Pioneer Corporation.  
All rights reserved.

---

## **PIONEER CORPORATION**

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

### **PIONEER ELECTRONICS (USA) INC.**

P.O. BOX 1540, Long Beach, California 90801-1540, U.S.A. TEL: (800) 421-1404

### **PIONEER ELECTRONICS OF CANADA, INC.**

300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada TEL: 1-877-283-5901, 905-479-4411

### **PIONEER EUROPE NV**

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium TEL: 03/570.05.11

### **PIONEER ELECTRONICS ASIACENTRE PTE. LTD.**

253 Alexandra Road, #04-01, Singapore 159936 TEL: 65-6472-7555

### **PIONEER ELECTRONICS AUSTRALIA PTY. LTD.**

178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: (03) 9586-6300

### **PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.**

Blvd.Manuel Avila Camacho 138 10 piso Col.Lomas de Chapultepec, Mexico,D.F. 11000 TEL: 55-9178-4270

K002\_B\_En